


MULTIFUNCTIONAL PORTABLE BT SPEAKER

Model: K213



User Manual

Speaker buttons and port diagram

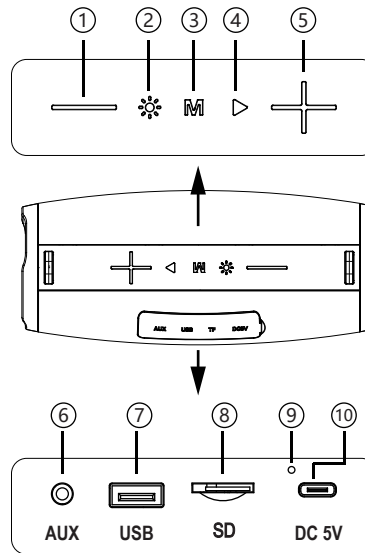

Speaker Operating Instructions

1. [—] : Short press to decrease volume/long press for previous song.
2. [✨] : Short press can switch lighting effect, seven kinds of lights can be switched when music is playing.
3. [M] : Short press mode conversion: Bluetooth mode, FM mode, AUX mode, Flash Drive mode, SD card mode, long press in FM mode to automatically search for channels.
4. [▶] : Long press to power ON/OFF, short press to play pause.
5. [+] : Short press to increase volume/long press for next song.
6. [AUX] : Insert AUX line for external power supply.
7. [USB] : Insert Flash Drive to play MP3 music. (Max workable capacity for USB is 64 GB, if more than 64 GB it cannot work)
8. [SD] : Insert SD card to play MP3 music. (Max workable capacity for TF Card is 64 GB, if more than 64 GB it cannot work)
9. [Charging indicator] : The red light is on when charging, red light is off when fully charged.
10. [DC 5V] : Charging jack, use provided charging cable packaged with this item to connect to the charger for charging.

Bluetooth Operation Instructions

1. Power on and enter Bluetooth mode, then turn on the mobile phone Bluetooth to search for the Bluetooth device K213, if prompted for a pairing password, please enter "0000" and click OK to connect.
2. Short press play button to answer and hang up.
3. Double-click the play button to redial the last phone number dialed from the phone.

Charging Instructions

Connect the charging cable to a 5V 1A charger, and plug it into the DC 5V charging port after the machine is turned off; The red light is on when charging, red light is off when fully charged.

Speaker Troubleshooting

1. **Automatically shuts down at startup**
The battery is low, please fully charge it before use.
2. **Playback automatically shuts down or restarts**
The battery is low, please fully charge it before use.

3. The charging light is not on, not charging

Make sure the charging cable is plugged in properly and whether it is damaged; and if the charger is normal, please use a 5V 1A charger to charge the speaker.

4. Bluetooth status silent

Make sure the Bluetooth is paired correctly, Bluetooth device is playing, and the volume is not at the minimum.

5. Bluetooth can't connect

To connect to Bluetooth within 10 meters. If other devices are already connected, you need to cancel the other devices before you can connect.

6. SD card/Flash Drive plays silently

Check whether the direction of the SD card/Flash Drive is inserted in place or whether it is in good contact; whether the music format in the SD card/Flash Drive is correct (Note: The music in the SD card/Flash Drive mainly supports MP3 format audio files)

7. Power saving mode, automatic shutdown

In Bluetooth mode, speaker is not connected to any device with Bluetooth, and if there is no operation for 15 minutes, the speaker will enter the power saving mode and automatically shut down.

8. Crash / function failure

Press and hold " " key for 10 seconds to restore the factory settings.

Technical Specifications

Input power: 5V 1A

Output: 2x5W

Frequency Range: 100Hz-18KHz

S/N : ≥80dB

Product size: 220x96x98mm

Battery capacity: 18650 3.7V 3000mAh

Parts List

1. Speaker	1PC
2. User Manual	1PC
3. Charging Cable	1PC
4. AUX Audio Cable	1PC