 


# Multifunctional BT Speaker

USER MANUAL

## Product Features (subject to the actual product)

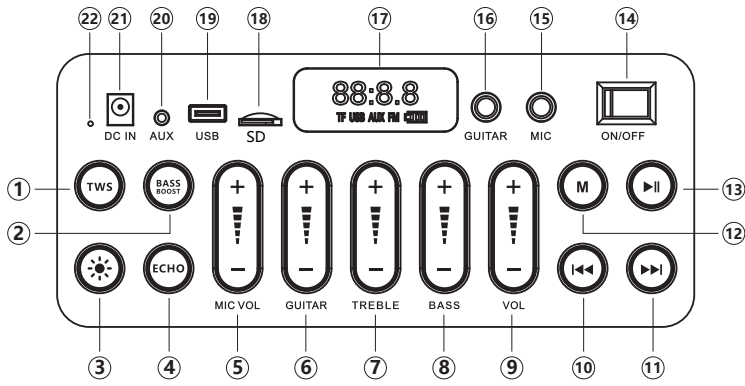

1. [ **TWS** ] : Short press enter into TWS function, press again to turn off TWS function.
2. [ **BASS BOOST** ] : Short press can enhance the bass effect.
3. [ **☀️** ] : Short press to turn on the ambient light, long press to turn off the ambient light directly.
4. [ **ECHO** ] : Short press switch for echo effect of microphone.
5. [ **MIC VOL** ] : Short press adjusts the volume of the microphone.
6. [ **GUITAR** ] : Short press adjusts the volume of the instrument.
7. [ **TREBLE** ] : Short press adjusts the treble of the speaker.
8. [ **BASS** ] : Short press adjusts the bass of the speaker.
9. [ **VOL** ] : Short press adjusts the main volume of the speaker.
10. [ **⏮** ] : Short press switches to previous song when playing music.
11. [ **⏭** ] : Short press switches to next song when playing music.
12. [ **M** ] : Short press for Bluetooth, AUX, Flash Drive, SD Card mode.
13. [ **⏸** ] : Short-press play/pause. In Bluetooth mode, long press Play key, to disconnect Bluetooth directly.
14. [ **ON/OFF** ] : Power on/off.
15. [ **MIC** ] : Microphone jack
16. [ **GUITAR** ] : Insert an instrument to play.

17. [ **LED Display** ] : Displays the status of the current function.
18. [ **SD** ] : Insert SD card to play MP3 music. (Max workable capacity for SD Card is 64GB, if more than 64GB it cannot work)
19. [ **USB** ] : Insert Flash Drive to play MP3 music. (Max workable capacity for USB is 64GB, if more than 64GB it cannot work)
20. [ **AUX** ] : AUX audio input.
21. [ **DC IN** ] : Charging the battery with adapter.
22. [ **Charging Indicator** ] : The red light is on when charging, the red light is off when fully charged and the green light is on.

### Bluetooth Connection Operation

 
Turn on to enter the Bluetooth mode. Then turn on the mobile Bluetooth and search the Bluetooth name of the speaker or find a string of digital code for pairing. If there is a prompt to pair the password, please enter "0000" and click confirm connection.

### Bluetooth Internal Recording Operation

1. Insert SD card or Flash Drive then switch to Bluetooth mode
2. After connecting to Bluetooth, the mobile phone will play the music
3. Insert in a wired microphone or turn on a wireless microphone.
4. Short press the record button, the Bluetooth internal recording starts to work, and then short press the record button to finish the internal recording and start to play the internal recording file.

### TWS Connection Operation

1. When in Bluetooth mode, turn on the two Bluetooth speaker devices at the same time, and then turn on any one speaker and short press TWS key to pair with another speaker to connect, long press to disconnect TWS.
2. The optimal connection distance between two Bluetooth speakers is about 5 meters.

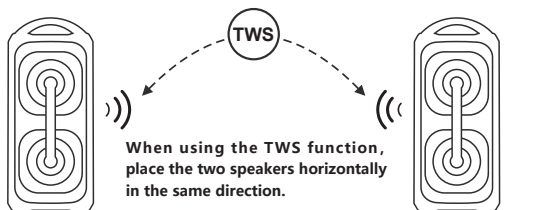


### Charging Instruction

1. To protect the performance of the battery, avoid using the machine while charging.
2. Note: The machine has no power bank function, it is forbidden to connect other devices through the USB interface.
3. Please use 12V/9V 1.5A adapter (which this machine comes with) for charging the battery, the red light is on when charging, the red light is off when fully charged and the green light is on.


### Remote Schematic Diagram and Operation Instructions

 1. Under normal circumstances, the remote control should be used within the receiving range of about 6 meters and 30 degrees from the device receiving window.
2. When operating the remote, please aim it at the receiving window of the device. There should be no obstacles between the remote and the device.
3. If the receiving window of the device is placed under a strong light, the operation panel of the remote may malfunction. In this case, please move the device away to avoid direct exposure.
4. When the remote has no battery, you can replace the No. 7 battery to avoid mixing old and new batteries. Please check the remote batteries regularly to see if they need to be replaced.

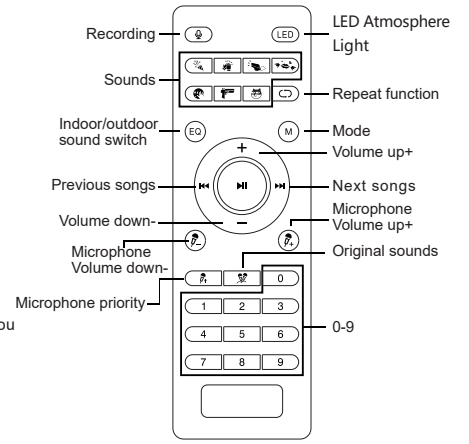

### Wireless Microphone Operation

 1. Long press to power ON/OFF.
2. When the microphone is not connected to the device, the display will flicker slowly. When the microphone is successfully connected to the device, the display screen will stop flashing and display a steady state. The display blinks quickly when the battery is low.
3. When wireless microphone battery is dead, you can twist the microphone to the left, and replace the No.5 AA battery. Please pay attention to the positive and negative poles when replacing the battery.
4. Howling: Please do not put the microphone close to the speaker device. Please try to put the microphone away from or the back of the speaker device, or try to turn down the volume of microphone.
5. Low microphone volume/No microphone volume: Please make sure the microphone volume is turned up to the maximum.

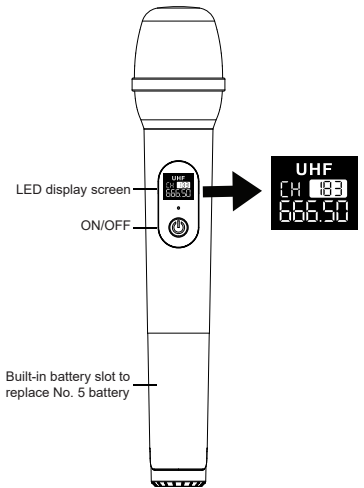

### Troubleshooting

1. **Automatically shuts down when turned on**  
The battery is low, please fully charge it before use.
2. **The player automatically shuts down or restarts**  
The battery is low, please fully charge it before use.
3. **The charging light is not on, not charging**  
Make sure the adapter wire is plugged in and not damaged and normal, please use 12V/9V-1.5A adapter to charge the speaker.
4. **Bluetooth status is silent**  
Please make sure the Bluetooth is paired correctly, that the Bluetooth device is playing, and that the volume is not at the minimum.
5. **SD card/Flash Drive playback is silent**  
Check whether the SD card is inserted in the correct direction and in place, whether the Flash Drive is inserted in place or in good contact; whether the music format in the SD card or Flash Drive is correct (Note: The music in the SD card/Flash Drive mainly supports MP3 compressed audio files and WMA lossless audio files playback); whether the device volume is adjusted to the minimum.
6. **Recording doesn't work**  
Make sure that there is space in the SD card or Flash Drive delete some files to make space. Recording should be in SD card mode, UFlash Drive mode and insert a wired microphone or turn on wireless microphone.

### 7. The recording cannot be deleted

Please long press the record button or connect to a computer to delete it when playing the recording file.

### 8. The recording sound is low or there is noise

Insert a wired microphone or turn on a wireless microphone when recording.

### Technical Specifications:

Input voltage: 12V/9V 1.5A	S/N : ≥80dB
Output Power : 2x60W	Battery : 7.4V/6000mAh
Frequency effect: 60Hz—12KHz	Product size: 268x246x600mm

### Product Packaging :

1. Host	1 PC	5. Remote	1 PC
2. Adapter	1 PC	6. Carry Belt	(OPTIONAL)
3. AUX cable	1 PC	7. Wireless microphone	(OPTIONAL)
4. User manual	1 PC		