 


Multifunctional Bluetooth Speaker

USER MANUAL

Product Features (subject to the actual product)

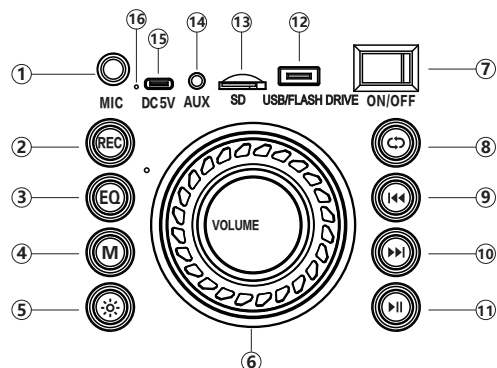

1. **[MIC]** : Microphone jack.
2. **[REC]** : With an SD card/Flash Drive inserted, plug in microphone, or turn on the wireless microphone, short press to record. The screen will display REC, then short press to play the recording, long press to delete the recording file while playing, and dEL is displayed
3. **[EQ]** : Short press for two kinds of EQ sound effects, EQ0 (outdoor sound when power on); EQ1 (indoor sound).
4. **[M]** : Short press **M** for Bluetooth, Flash Drive, SD card, FM; long press to automatically search for channels when in FM mode.
5. **[LED]** : Short press to switch the lighting effect. There is only one lighting effect in the FM mode.
6. **[VOLUME]** : Turn left to decrease volume, turn right to increase volume.
7. **[ON/OFF]** : Power ON/OFF
8. **[↺]** : In music mode, short press for single loop **[ONE]** all loop **[ALL]** .
9. **[⏮]** : Short press to previous song/select the previous radio station, long press to rewind.
10. **[⏭]** : Short press to next song/select the next radio station, long press to fast forward.
11. **[⏸]** : Short press to play/pause, and long press to automatically search for channels in FM mode.
12. **[USB]** : Insert the Flash Drive to play MP3 music.(Max workable capacity for USB is 64GB ,if more than 64GB it cannot work)
13. **[SD]** : Insert the SD card to play MP3 music.(Max workable capacity for SD Card is 64GB ,if more than 64GB it cannot work)

14. **[AUX]** : AUX audio input.
15. **[DC 5V]** : Charging jack, Insert USB charging cable connect to the charger for charging.
16. **[Charging light]** : The red light is on when charging, the red light is off when fully charged, and the green light is on.

Bluetooth Connection Operation:

Turn on to enter the Bluetooth mode. Then turn on the mobile Bluetooth and search the Bluetooth name of the speaker or find a string of digital code for pairing. If there is a prompt to pair the password, please enter "0000" and click confirm connection.

Bluetooth Internal Recording Operation:

 
1. Insert the SD card or Flash Drive, and then switch to Bluetooth mode.
2. After connecting to Bluetooth, the mobile phone will play the music.
3. Insert the wired microphone or turn on the wireless microphone.
4. Short press the record button, the Bluetooth internal recording starts, and then short press the record button to complete the internal recording and start playing the internal recording file.

Charging Instruction:

Use a 5V---2A charger connected with usb charging cable for the device to charge, the red light is on when charging, and the red light is off when fully charged, and the green light is on.

Remote Schematic Diagram and Operating Instructions

1. Under normal circumstances, the remote control should be used within the receiving range of about 6 meters and 30 degrees from the device receiving window.
2. When operating the remote, please aim it at the receiving window of the device. There should be no obstacles between the remote and the device.
3. If the receiving window of the device is placed under a strong light, the operation panel of the remote may malfunction. In this case, please move the device away to avoid direct exposure.
4. When the remote has no battery, you can replace the No. 7 battery. Avoid mixing old and new batteries. Please check the remote batteries regularly to see if they need to be replaced.

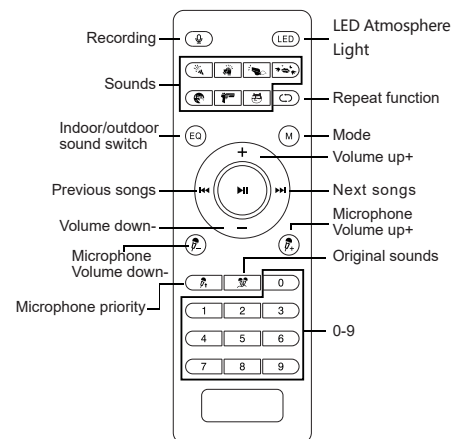

Troubleshooting

1. Automatically shuts down when turned on

The battery is low, please fully charge it before use.

2. The player automatically shuts down or restarts

The battery is low, please fully charge it before use.

3. The charging light is not on, not charging

Please make sure the charging cable is plugged in properly and whether it is damaged or normal, please use a 5V $\overline{\text{Z}}$ A charger to charge the device.

4. Bluetooth status is silent

Please make sure the Bluetooth is paired correctly, that the Bluetooth device is playing, and that the volume is not at the minimum.

5. SD card/Flash Drive playback is silent

Check whether the SD card is inserted in the correct direction and in place; whether the Flash Drive is inserted in place or in good contact; whether the music format in the SD card or Flash Drive is correct (Note: The music in the SD card/Flash Drive mainly supports MP3 compressed audio files and WMA lossless audio files playback); whether the device volume is adjusted to the minimum.

6. Recording doesn't work

Whether there is space in the SD card or Flash Drive, delete some files to make space. Recording should be in SD card mode, Flash Drive mode and insert a wired microphone or turn on wireless microphone.

7.The recording cannot be deleted

Please long press the record button or connect to a computer to delete it when playing the recording file.

8. The recording sound is low or there is noise

Insert a wired microphone or turn on a wireless microphone when recording.

Technical Specifications:

Output Power: 2x30W
 Frequency effect: 80Hz-12KHz
 Input power: 5V---2A
 Bluetooth version: 5.0
 S/N : \geq 80dB

Product Packaging :

1. Host	1 PC
2. User Manual	1 PC
3. Charging Cable	1 PC
4. Remote	1 PC