




Source Unit

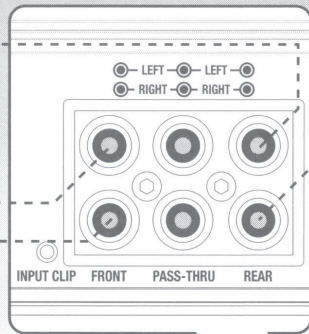

*Keep grounds as short as possible


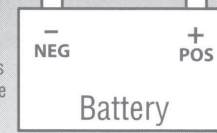


Switched 12V to REM

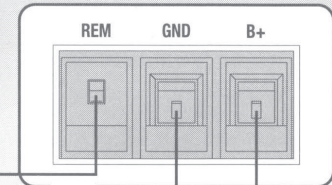


Connect to chassis ground of vehicle

*Keep grounds as short as possible

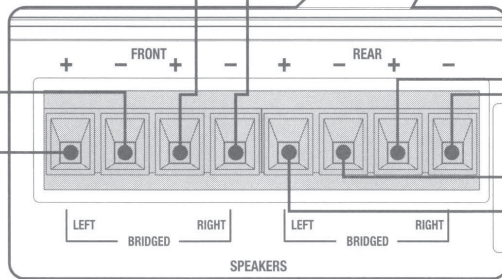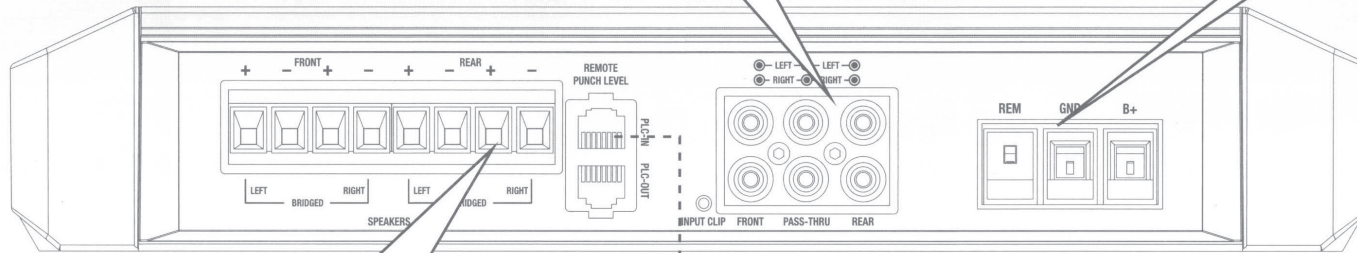

CAUTION
Be sure to connect speakers and Punch Level Control - PLC (if equipped) after amplifier output clip adjustment. (see reverse)

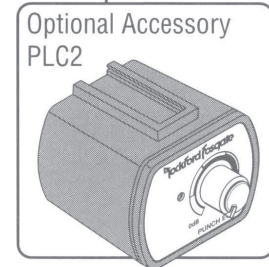

* Specifications subject to change without notice. Images depict typical setup. Refer to manual for additional wiring options.


Step 1 - Input

Input Clip Indicator Setup

Be sure to disconnect all speakers from the amplifier.


CAUTION

Failure to comply may cause damage to connected components and/or amplifier.

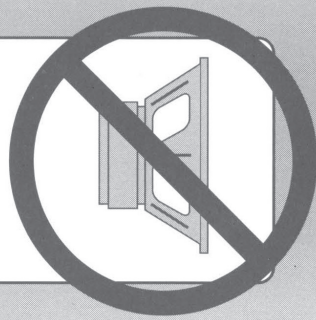


Step 2 - Input

Turn on the source unit with volume set to zero.

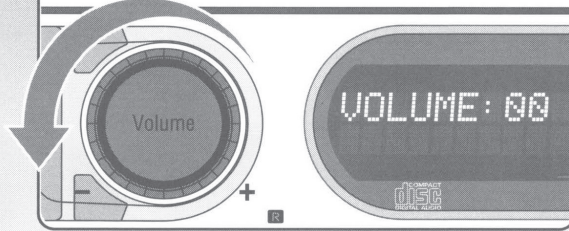

Step 3 - Input

Adjust the Bass & Treble levels on the source unit to flat.

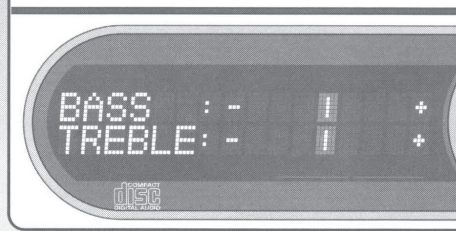


Step 4 - Input

Insert test tone or music CD to play for setup.



Note: Use the 40Hz @ 0dB tone (Track 5) for mono amplifier applications or the 1kHz @ 0dB tone (Track 7) for multi-channel amplifier applications. Be sure your x-over is switched to the appropriate filter setting.


Step 5 - Input

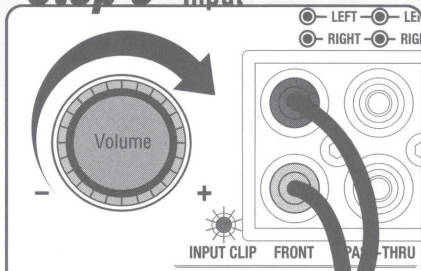

Increase the source unit volume until the Input Clip Indicator illuminates red.

Note: Input Clip can be viewed remotely with optional PLC2.

Step 6 - Input

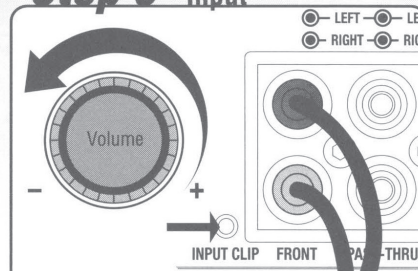

Decrease the source unit volume slightly until the light turns completely off. This establishes your maximum source unit volume for adjusting the Output Clip Indicator.


Note: Some source units will not clip.

Step 7 - Output

Be sure to disconnect Punch Level Control - PLC (if equipped) from the amplifier.

Step 8 - Output


Output Clip Indicator Setup

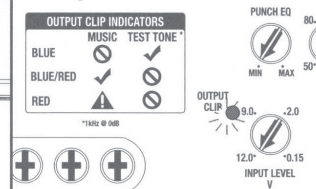

Adjust the Input Level knob until the Output Clip Indicator illuminates to the appropriate color. Repeat for all channel levels of input.



Step 9 - Output

Turn the source unit volume down.

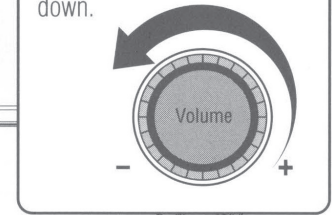



Step 10 - Output

Reconnect all speakers and Punch Level Control - PLC (if equipped) to the amplifier. Be sure to maintain proper speaker polarity.

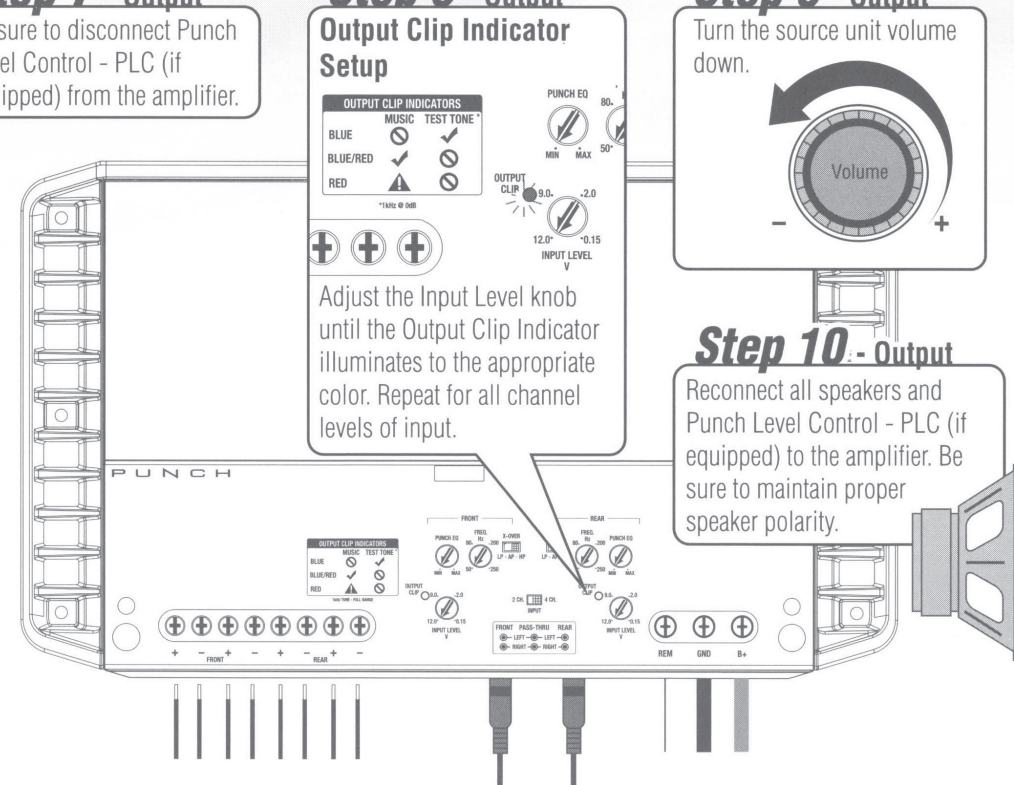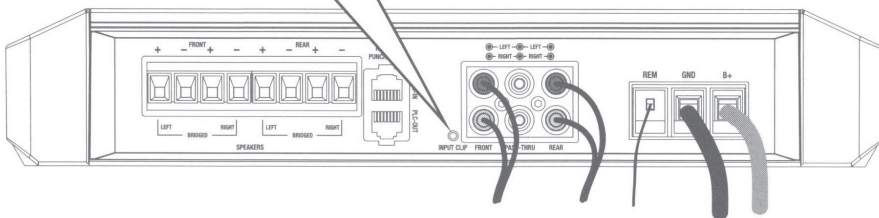


ELEMENT READY




Rockford's Element Ready product line takes into account the effects of the environment and takes measures to ensure lasting performance.

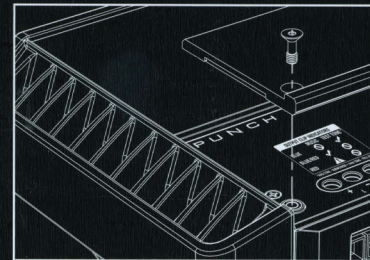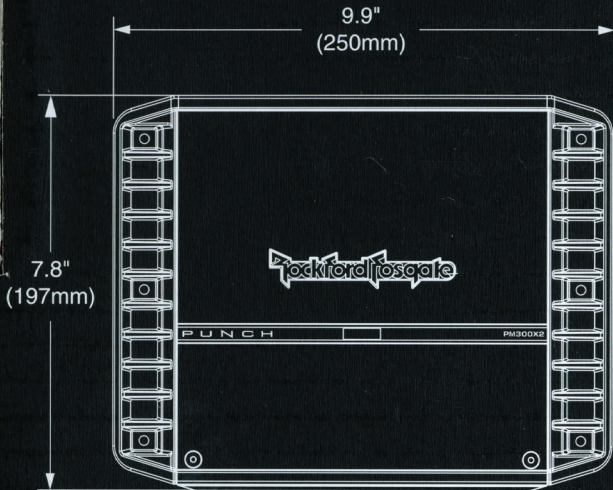

Stealth Top Mounted Control Panel

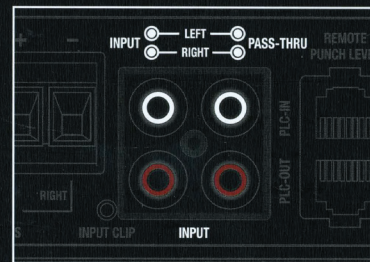

High Level Input Capable with Auto Turn On Circuit
(With Optional Accessory RFI2SW)

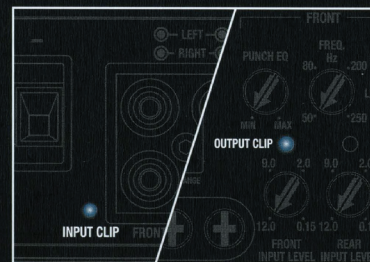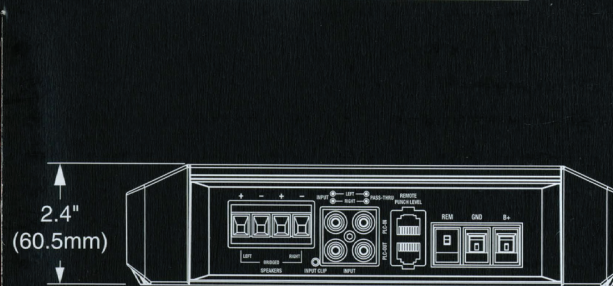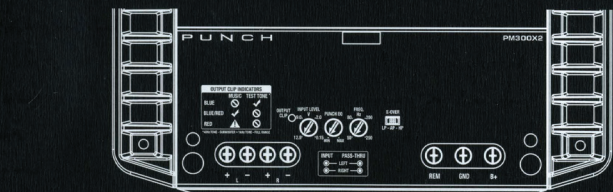

Input & Output Level Clip Indicators

UV Inhibitor Materials



Dust Resistant



Corrosion Protection
- Conformal Coated PCB Boards



Stainless Hardware

PM300X2

300 Watt Stereo Amplifier



- Rated Power: 100x2 @ 4 ohm, 150x2 @ 2 ohm, 300x1 @ 4 ohm/Bridged
- Crossover: 12dB/Oct Butterworth
- Crossover Frequency: Variable 50Hz-250Hz HP/AP/LP
- Punch EQ: 0-14dB @ 12.5kHz and 0-18dB @ 45Hz
- Power Terminals: 4 AWG





Rockford Fosgate®

FREE!
1 YEAR
EXTENDED
WARRANTY
 with purchase of a qualifying
Rockford Fosgate
Amplifier
Installation Kit
 1175-56999-02

Rockford Fosgate
 Designed and Engineered in Tempe, AZ, U.S.A.
 Made in Thailand
PM300X2
 Manufacture Date: 2015-01-24

PM300X2

 7 80687 134507 15

Rockford Fosgate Tempe, AZ, United States
Made in Thailand



©2014 Rockford Corporation. All Rights Reserved. ROCKFORD FOSGATE, PUNCH® and associated logos where applicable are registered trademarks of Rockford Corporation in the United States and/or other countries. All other trademarks are the property of their respective owners. Specifications subject to change without notice.

1315-59339-01



SETUP DISC

AUDIO TRACKS

1. 3Sixty Level Set
2. 3Sixty OEM Integration
3. Left/Right/Center Channel ID
4. Polarity Pulses
5. 40Hz / 0dB
6. 400Hz / 0dB
7. 1kHz / 0dB
8. 4kHz / 0dB
9. 40Hz / -5dB
10. 400Hz / -5dB
11. 1kHz / -5dB
12. 4kHz / -5dB
13. 40Hz / -10dB
14. 400Hz / -10dB
15. 1kHz / -10dB
16. 4kHz / -10dB
17. 40Hz / -15dB
18. 400Hz / -15dB
19. 1kHz / -15dB
20. 4kHz / -15dB
21. Slow Sine Sweep 20Hz – 200Hz
22. Slow Sine Sweep 200Hz – 2kHz
23. Slow Sine Sweep 2kHz – 20kHz
24. Log Swept Chirp
25. Uncorrelated Pink Noise
26. Correlated Pink Noise
27. All Bits High

CD-ROM CONTAINS:

Product Manual(s)

1600-58530-01



Rockford Fosgate Tempe, AZ, United States

©2013 Rockford Corporation. All Rights Reserved. ROCKFORD FOSGATE, PUNCH and associated logos where applicable are registered trademarks of Rockford Corporation in the United States and/or other countries. All other trademarks are the property of their respective owners. Specifications subject to change without notice.

COMPACT
disc
DIGITAL DATA

SETUP DISC

1. 3Sixty Level Set
2. 3Sixty OEM Integration
3. Left/Right/Center Channel ID
4. Polarity Pulses
5. 40Hz / 0dB
6. 400Hz / 0dB
7. 1kHz / 0dB
8. 4kHz / 0dB
9. 40Hz / -5dB
10. 400Hz / -5dB
11. 1kHz / -5dB
12. 4kHz / -5dB
13. 40Hz / -10dB
14. 400Hz / -10dB

15. 1kHz / -10dB
16. 4kHz / -10dB
17. 40Hz / -15dB
18. 400Hz / -15dB
19. 1kHz / -15dB
20. 4kHz / -15dB
21. Slow Sine Sweep 20Hz–200Hz
22. Slow Sine Sweep 200Hz–2kHz
23. Slow Sine Sweep 2kHz–20kHz
24. Log Swept Chirp
25. Uncorrelated Pink Noise
26. Correlated Pink Noise
27. All Bits High

CD-ROM

Product Manual(s)

rockfordfosgate.com • 600 S. Rockford Drive • Tempe, AZ 85281 • 1-800-669-9899



COMPACT
disc
DIGITAL DATA

All trademarks are the property of their respective owners.

CERTIFICATE OF PERFORMANCE VERIFICATION



Model #: **PM300X2** Serial #: XXXXXXXXXX Birth Date: **01/24/2015** Test System: **RF-RATS-3**

SYSTEM OPERATION	Idle Current Measure Current Draw at Idle							System Voltage Check System Reference Voltages						
	A PASS							V1 3.888 V2 4.944						
	Bias Set Output Channel Bias							High Rail Voltage Check Amplifier Rail Voltages						
	CH1 PASS CH2 PASS CH3 N/A CH4 N/A							V1 32.98 V2 -32.90 V3 N/A						
	DC Offset Check for No DC Voltage on Outputs							Low Rail Voltage Check Amplifier Rail Voltages						
CH1 -0.000 CH2 -0.005 CH3 N/A CH4 N/A CH5 N/A							V1 16.57 V2 -16.27							
Dark Current Current Draw < 100uA							Gain Tracking Check Gain Tracking Between Channels (dB)							
A PASS							CH1 0.000 CH2 0.000 CH3 N/A CH4 N/A							

SIGNAL	Frequency Response 20Hz-20kHz Sweep @ 1W RMS							High Pass Crossover Check 20Hz-20kHz Sweep @ 1W RMS						
	CH1 PASS CH2 PASS CH3 N/A CH4 N/A CH5 N/A							CH1 PASS CH2 PASS CH3 N/A CH4 N/A CH5 N/A						
	Remote Level & 2/4/5 Ch. Select Check 20Hz-20kHz Sweep @ 1W RMS							Low Pass Crossover & Punch EQ Check 20Hz-20kHz Sweep @ 1W RMS						
	CH1 PASS CH2 PASS CH3 N/A CH4 N/A CH5 N/A							CH1 PASS CH2 PASS CH3 N/A CH4 N/A CH5 N/A						
	Common Mode Rejection Rated 20Hz-20kHz Sweep @ 1W RMS							Channel Separation from Left to Right 20Hz-20kHz Sweep @ Rated RMS Power						
	CH1 PASS CH2 PASS CH3 N/A CH4 N/A CH5 N/A							CH1 PASS CH2 PASS CH3 N/A CH4 N/A CH5 N/A						
Signal to Noise Ratio 20Hz-20kHz Sweep @ Rated RMS Power							Total Harmonic Distortion 20Hz-20kHz Sweep @ 1W RMS (%)							
CH1 PASS CH2 PASS CH3 N/A CH4 N/A CH5 N/A							CH1 0.107 CH2 0.094 CH3 N/A CH4 N/A CH5 N/A							
Input Sensitivity Check Sensitivity @ Minimum							Total Harmonic Distortion Rated (%) 20Hz-20kHz Sweep @ Rated RMS Power							
CH1 PASS CH2 PASS CH3 N/A CH4 N/A CH5 N/A							CH1 0.012 CH2 0.008 CH3 N/A CH4 N/A CH5 N/A							

RELIABILITY	Short Protect Short All Channels Sequentially @ 1% THD							Thermal Test Thermistor Voltage Check						
	CH1 PASS CH2 PASS CH3 N/A CH4 N/A CH5 N/A							TH1 1.225 TH2 1.538 TH3 N/A TH4 N/A TH5 N/A						
	Burn-In Amplifier Accelerated Life Monitor (45 sec. @ 1% THD)													
CH PASS TH PASS V PASS BIAS PASS IR PASS														

POWER	Channel Power Individual Channel Power @ 1% THD @2 Ω							Total Power Total RMS Power @ 1% THD						
	CH1 211 CH2 211 CH3 N/A CH4 N/A CH5 N/A							421 watts						
	Total Power Total RMS Power @ Each Impedance @ 1% THD													
4Ω 239 2Ω 421 1Ω N/A 2/1Ω N/A														

ALL Rockford Fosgate amplifiers are designed, developed, manufactured and tested in accordance with the CEA-2006 amplifier rating requirements. All tests conducted at 14.4Vdc, Min. Impedance, 1kHz(ab/ad) or 100Hz (bd) unless otherwise stated.
 ©2012 Rockford Corporation. All Rights Reserved. ROCKFORD FOSGATE, and associated logos where applicable are registered trademarks of Rockford Corporation in the United States and/or other countries. All other trademarks are the property of their respective owners. Specifications subject to change without notice.





Are You Engineered to Rock?

Get a One-Year Extended Warranty when you use a matching Rockford Fosgate Amplifier Installation kit with your Amplifier!

We want you to get the performance and reliability that made Rockford Fosgate Amplifiers famous. Using poor-quality under-spec wiring is a guaranteed way to get less than you paid for from your system.

We are so certain that getting your system wired to rock with the right wire and cables will make a difference, that we will give you an additional 1 year warranty on your amp when you use the matching amplifier installation kit. See your dealer to determine the matching kit for your amplifier.

To extend your warranty under this program attach the serial number sticker or UPC code removed from the original amplifier installation kit package in the box below. Keep this form along with your original purchase receipt.

One warranty extension per amplifier regardless of the number of amplifier kits purchased. Amplifier and wiring kit must be purchased at the same time.

What is Covered

This warranty applies only to Rockford Fosgate products sold to consumers by Authorized Rockford Fosgate Dealers in the United States of America or its possessions. Product purchased by consumers from an Authorized Rockford Fosgate Dealer in another country are covered only by that country's Distributor and not by Rockford Corporation.

Who is Covered

This warranty covers only the original purchaser of Rockford product purchased from an Authorized Rockford Fosgate Dealer in the United States. In order to receive service, the purchaser must provide Rockford with a copy of the receipt stating the customer name, dealer name, product purchased and date of purchase. Products found to be defective during the warranty period will be repaired or replaced (with a product deemed to be equivalent) at Rockford's discretion.

What is Not Covered

1. Damage caused by accident, abuse, improper operations, water, theft, shipping
2. Any cost or expense related to the removal or reinstallation of product
3. Service performed by anyone other than Rockford or an Authorized Rockford Fosgate Service Center
4. Any product which has had the serial number defaced, altered, or removed
5. Subsequent damage to other components
6. Any product purchased outside the U.S.
7. Any product not purchased from an Authorized Rockford Fosgate Dealer

Limit on Implied Warranties

Any implied warranties including warranties of fitness for use and merchantability are limited in duration to the period of the express warranty set forth above. Some states do not allow limitations on the length of an implied warranty, so this limitation may not apply. No person is authorized to assume for Rockford Fosgate any other liability in connection with the sale of the product.

How to Obtain Service Under the Extended Warranty Program

The amplifier must be returned by the customer (you) or an authorized Rockford Fosgate retailer with a copy of the original receipt and the ORIGINAL Performance Verification Certificate with the serial number or UPC code from the amp installation kit. Contact your Authorized Rockford Fosgate Dealer or our Customer Support Specialists (1-800-669-9899) for assistance.

EU Warranty

This product meets the current EU warranty requirements, see your Authorized dealer for details. "This Additional One-Year Warranty" is only available where allowed under local laws.

Attach Amplifier Installation Kit
Serial Number or UPC Code from
original packaging here.