

#### **Regular Cab**

- 2 doors
- No rear seat(s)







#### Double Cab (2014 to Current)

- 4 full doors, that all open the same direction, like car doors
- All 4 door handles are located on the outside of the truck
- Visually, the back doors are smaller in width than the front doors
- 2014: 4th character of VIN is "V"
- 2015: 10th character of VIN is "Z" Also, the back door of this truck measures 30-1/2" wide

(Using a tape measure, measure directly under the back door handle across the width of the door)

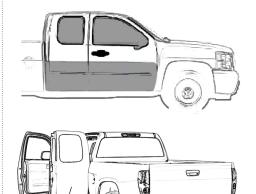

1999-2007 "Classic" Model

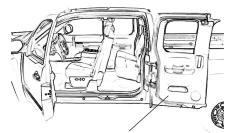


2007-2013 "New Body Style" Model


#### **Extended Cab**

- You have to open the front door to open the back door
- The front doors open the opposite direction of the back doors (commonly referred to as "suicide doors")
- 1999-2007 "Classic":

The back door opens partially as pictured above (it does NOT swing open all the way to the truck bed) and the side windows in the back seat do NOT roll down

2007-2013 "New Body Style":
 The back doors swing ALL the way open and come close to touching the truck bed and the side windows in the back seat roll down

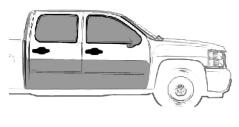

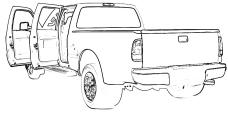

#### **Crew Cab**

- 4 full doors, that all open the same direction, like car doors
- All 4 door handles are located on the outside of the truck
- Visually, the front and back doors are the same width across
- 2014: 4th character of VIN is "U"
- 2015: 10th character of VIN is "F" Also, the back door of this truck measures 40" wide

(Using a tape measure, measure directly under the back door handle across the width of the door)


# HONDA RIDGELINE





# **Crew Cab**


- 4 full doors, that all open the same direction, like car doors
- All 4 door handles are on the outside of the truck

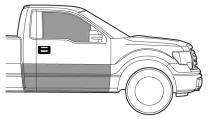

## **Regular Cab**


- 2 doors
- No rear seat(s)

Note: 2004-2008 Ford regular cabs are unique because they have 1-2 additional small doors that open opposite the front doors, similar to the SuperCab. This may be confusing when determining your cab style, however, the major difference is the regular cab does not have rear seats.

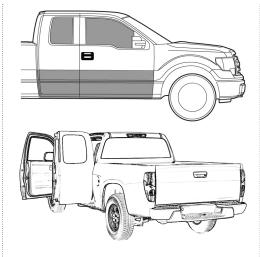

# **SuperCab**

- You have to open the front door to open the back door
- The front door opens the opposite direction of the back door (commonly referred to as "suicide doors")

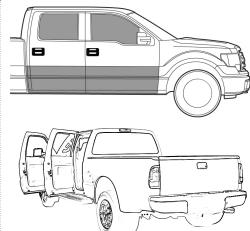

### **SuperCrew**


- 4 full doors, that all open the same direction, like car doors
- All 4 door handles are on the outside of the truck

## **DODGE** | **RAM**



## **Regular Cab**


- 2 doors
- No rear seat(s)

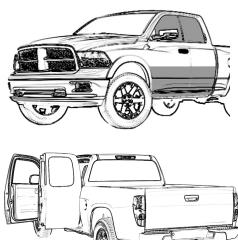

#### Quad Cab (Old Style)

- You have to open the front door to open the back door
- The front door opens the opposite direction of the back door (commonly referred to as "suicide doors")



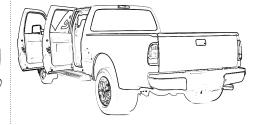

### **Quad Cab/Crew Cab**

## (New Style)

- 4 full doors, that all open the same direction, like car doors
- All 4 door handles are on the outside of the truck






## **King Cab**

- You have to open the front door to open the back door
- The front door opens the opposite direction of the back door (commonly referred to as "suicide doors")



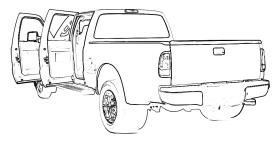

#### **Crew Cab**


- 4 full doors, that all open the same direction, like car doors
- All 4 door handles are on the outside of the truck


# **TOYOTA TUNDRA**



# **Regular Cab**


- 2 doors
- No rear seat(s)

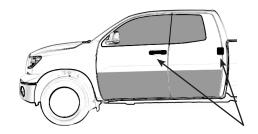


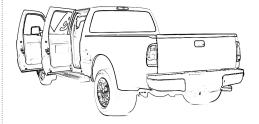

### **Double Cab**

- The handle on the front door is <u>different</u> than the handle on the back door
- 4 doors, all open the same direction, like car doors
- 2007-2015: The bottom of the rear seats lift up

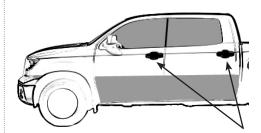

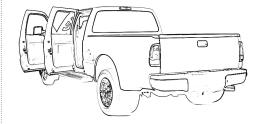

# **CrewMax**

- All 4 door handles look the same
- 4 full doors, that all open the same direction, like car doors
- 2007-2014: Rear seats 'slide' forward