

CA-PLT98RG

XM160-2-98 AMPLIFIER MOUNTING PLATE DESIGNED AND
ENGINEERED FOR 1998-2013 HARLEY-DAVIDSON® FLTR ROAD GLIDE®
MOTORCYCLES

INSTRUCTION MANUAL

JVCKENWOOD Corporation

Important Notes

©2023 JVCKENWOOD Corporation. All Rights Reserved. KENWOOD® and eXcelon® are registered trademarks of JVCKENWOOD Corporation. Harley-Davidson®, Electra Glide®, Road Glide®, Street Glide®, Ultra Classic®, Tri Glide®, CVO™, Screamin Eagle® and Tour-Pak® are trademarks or registered trademarks of Harley-Davidson, Inc. and/or its affiliates and if used or implied are for reference only. There is no affiliation between Harley-Davidson, Inc. and/or its affiliates and JVCKENWOOD Corporation and/or its affiliates. All other trademarks are the property of their respective owners. Specifications subject to change without notice.

Take the time to read through this instruction manual.

Familiarity with installation and operation procedures will help you obtain the best performance from your new product.

XM160-2-98 Amplifier Mounting Plate Installation Instructions

Installation procedure

1. Apply one-half of the supplied Velcro to the mounting plate you are installing and the other half to the back of the amplifier.
2. Place the amplifier onto the mounting plate.
3. With the outer fairing off, remove the wire harness from the wire "strap" (located on the brake side of the inner fairing).

NOTE: In this area, a larger factory "Molex" plug (if present) is secured to the frame.


4. Pull down on this Molex plug to unclip it from the frame and let it hang for now (newer model bikes have this Molex located elsewhere).

NOTE: The "A" arrow in Fig 1.1 shows one of the nuts that need to be removed so that the adaptor plate can attach onto the 2 main studs. The other nut is hidden behind the wiring in Fig 1.1

5. Once the plate is on, re-install these nuts to factory torque specifications.
6. Secure the wires so they cannot rub against the amplifier when the bike is moving.
7. The Molex plug that was removed from the frame can now be re-secured to the other wire harness using zip ties (if Molex plug is present).

NOTE: Reference the XM160-2-98 manual for amplifier wiring instructions.

Fig 1.1

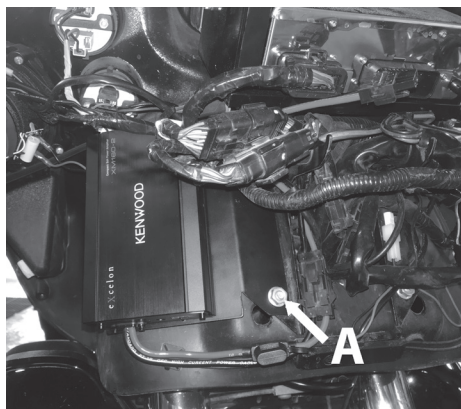

For updated information (the latest Instruction Manual, etc.),
please visit the following website:

https://manual.kenwood.com/en_contents/search/

