



A. Assemble the tube base loosely as shown.

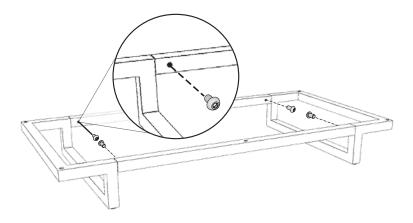

B. Attach tube base to your cabinet using connector bolt.

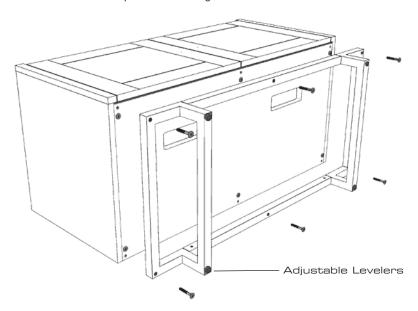

C. Secure tube base with washers and screws.