Stealthbox

INSTALLATION GUIDE for the

SB-T-TACDC/10W1v3

SKU# 94312

2005 - 2011 Toyota Tacoma Double Cab



Thank you for choosing a JL Audio Stealthbox* for your automotive sound system. With proper installation, your new vehiclespecific enclosed subwoofer system will deliver years of listening pleasure.

We strongly recommend that you have your new Stealthbox* installed by your authorized JL Audio dealer. The installation professionals employed by your dealer have the necessary tools and experience to disassemble and reassemble your vehicle properly. Also, keep in mind that your warranty coverage extends to 2 years if your system is installed or approved by your authorized JL Audio dealer. If you prefer to perform your own installation, please read this installation guide completely before beginning the process.



! IMPORTANT

If you choose to perform the installation yourself, it is absolutely vital that the Stealthbox* be properly mounted to the vehicle according to these instructions. Failure to mount the enclosure properly presents two problems:

- 1) The sub-bass performance will suffer due to the movement of the enclosure caused by the force exerted by the woofer(s).
- 2) A loose enclosure presents a serious safety hazard in the event of a collision or sudden deceleration.

INSTALLATION DIFFICULTY:



ESTIMATED TIME: 2-3 HOURS



STEP 1

Remove the all contents from the rear seating area.

Lower the second row seats.

Remove the two-piece plastic storage bins from the rear wall



STEP 2

The rear wall of the passenger's side storage bin needs to be cut out. Follow **STEPS 2 - 4** carefully. The cut lines are indicated by the white dash lines. Use a cutting wheel for the best results.

This cut line follows the corner line crease of the storage bin.



STEP 3


This cut line also follows the corner line crease.



STEP 4
The top cut line runs straight across. The line does not follow the corner crease, as like the other cut lines. This top line is 1/2-inch in front of the corner crease.



STEP 5Remove the ribs that are located on the back side of the storage bin.

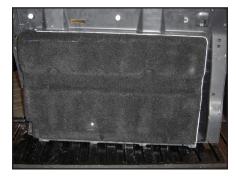

S T E P 6The Stealthbox® is to be inserted from the back side of the modified panel. If necessary, trim the panel to allow the Stealthbox® to fit.



The supplied wax square is to be placed onto the rear wall, just to the right of the second mount as in the picture.



STEP 8

Thread the supplied socket cup screw into the rear of the Stealthbox*, leaving 1/4-inch of the threads exposed.

Place the Stealthbox® with the modified plastic panel into the mounting location and press firmly onto the Stealthbox®.

Remove the Stealthbox® with the plastic panel carefully, leaving the wax square in place. The socket cup set screw will leave an impression onto the wax square.



STEP 9

Note: Before drilling, make sure that you are not going to be drilling into any gas lines, brake lines, transmission lines, electrical wiring, transfer case (4x4 vehicles) or anything else that might cause a reduction in your weekly pay. Always wear eye protection when drilling!

With a drill and a 1/2-inch drill bit, drill through the impression made in the wax square.

Remove the wax square.




STEP 10

Back out the socket cup set screw that was installed in STEP 8, to expose 1 1/4-inch of the threads.

Place the Stealthbox* with the plastic panel back into the mount area. Guide the socket cup set screw through the drilled hole.

Run speaker wire from the amplifier's location to the Stealthbox* location and check for proper operation of the woofer.

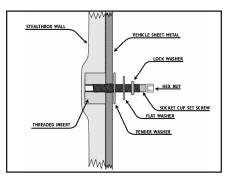

STEP 1

From under the vehicle, place the supplied fender washers, flat washers, lock washers and then hex nut onto the protruding socket cup set screw and secure. Adjust the amount of exposed thread on each cup set screw if necessary.

Note: For added protection, it is recommended that you apply a bead of silicone between the vehicle and the fender washer. After the bolt assembly is tightly secured, it is also recommended that vehicle undercoating material is applied to the exposed assembly.

Page 2 • JL Audio, Inc 2016



STEP 12

Secure the driver's side plastic panel back onto the rear wall.



CONGRATULATIONS

You have completed the installation for this model!

Please refer to the Power Recommendation section for an amplifier recommendation and basic set-up help.

INCLUDED HARDWARE

- (1) 3/8-inch Split Lock Washer
- (1) 3/8-inch -16 x 2-1/4-inch Socket Cup Set Screw
- (1) 3/8-inch Flat Washer
- (1) 3/8-inch -16 Hex Nut (1) 3/8-inch x 2-inch Fender Washer
- (1) 3-inch x 3-inch Wax Square

SPECIFICATIONS


Enclosure Type: Acoustic Suspension (sealed)

Driver Type: (2) 10W1v3-4 Nominal Impedance: 2 ohms

Continuous Power Handling: 600 Watts

POWER RECOMMENDATION

JL Audio recommends using a high quality amplifier such as the JL Audio XD600/1v2. The diagram below shows the recommended crossover, infrasonic filter and equalizer settings for the XD600/1v2 when being used to power your Stealthbox®.

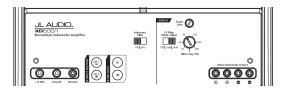

The JL Audio XD600/1v2 is a very versatile audio component. Please consult the owner's manual for even more detailed information about installing and tuning this amplifier.

MID/HIGH FREQUENCY DRIVER FITMENT

A variety of JL Audio coaxial and component systems will fit in the factory speaker locations of you vehicle.

Front Speaker Size / Location: 6-inch x 9-inch / Front Doors

Fits JL Audio Models: TR690-TXi & *C2690-TX

Rear Speaker Size / Location: 6.5-inch / Rear Doors

Fits JL Audio Models: TR650-CXi, TR650-CSi, C2650-X, C2650, *XR650-CXi, *C3650,

*C5-650x, *C5-650 & *ZR650-CSi

*Mounting / spacer plate is required.





(954) 443-1100

www.jlaudio.com

All specifications are subject to change without notice. "JL Audio" and the JL Audio logo, "Stealthbox" and the Stealthbox logo are registered trademarks of JL Audio, Inc. "Ahead of the Curve" and its respective logo is a trademark of JL Audio, Inc. JLA-SKU# 011238 - 09.20.2016 • Printed in USA • ©2016 JL Audio, Inc. For more detailed information please visit us online at www.ilaudio.com



10369 NORTH COMMERCE PARKWAY • MIRAMAR, FLORIDA • 33025 • USA