



ML Power

ADVANCED WEB MANUAL

ML Power 4

rev 1.0b

The User Manual is also
available from our web site
www.hertzaudiovideo.com

Index

1. INTRODUCTION	3
2. PACKAGE CONTENTS	3
3. SAFE SOUND	4
4. GENERAL PRECAUTIONS	5
5. INSTALLATION AND SIZE	6
6. BATTERY / REMOTE CONNECTION AND HOW TO REPLACE THE FUSE	7
7. AUTO TURN-ON WITH HI-LEVEL INPUTS	7
8. TOP PANEL CONTROLS: SWITCHES AND ADJUSTMENT	8
9. FRONT AND REAR PANELS	9
10. CONFIGURATION DIAGRAMS	
PRE-IN A FOR WOOFER AND MID/HI	10
PRE-IN A/B FOR FRONT AND REAR	11
PRE-IN A AND HI-IN B FOR FRONT AND REAR	12
HI-IN A AND PRE-OUT	13
HI-IN A AND B AND PRE-OUT	14
HI-IN A AND B FOR FRONT AND REAR	15
PRE-IN A FOR FRONT AND SUBWOOFER MONO (BRIDGE)	16
PRE-IN A AND B FOR FRONT DUAL MONO	17
HI-IN A AND PRE-OUT FOR WOOFER AND MID/HI	18
11. CABLES	19
12. BLOCK DIAGRAM	20
13. TECHNICAL SPECIFICATIONS	21

1 INTRODUCTION

Thank you for purchasing a Hertz product, designed according to the highest quality standards.





Your ML Power amplifier is a cutting-edge product of compact size, providing high power and quality of sound.

It will definitely ensure you maximum satisfaction by taking up very small room in your vehicle.

Before the installation, in addition to reading the Quick Start Guide (QSG), the consultation of this user's manual available on the Hertz website will let you achieve the highest performance from your amplifier.

2. PACKAGE CONTENTS

In the package, besides your amplifier, you will find:

- **Quick Start Guide** 
- **Warranty Card** 
- **40 A blade fuse**  x2
- **4,2 x 16 mm self-tapping, cross-headed fixing screws**  x4

3. SAFE SOUND

HERTZ AMPLIFIERS CAN BE PART OF A HIGH POWER AUDIO SYSTEM THAT CAN GENERATE VERY HIGH UNDISTORTED SOUND PRESSURE LEVELS. PLEASE REMEMBER THAT LONG EXPOSURE TO AN EXCESSIVELY HIGH SOUND PRESSURE LEVEL MAY DAMAGE YOUR HEARING; THEREFORE, PLEASE USE COMMON SENSE AND PRACTICE SAFE SOUND.

Safety must be at the forefront while driving. The listening volume should never obscure the noise coming from the outside of your vehicle; you should be able to hear the sounds generated by your vehicle in order to promptly face any emergency situation.

To achieve the best possible performance from your new components, we recommend you follow the instructions in this manual carefully. In order to design and create top level car hi-fi systems you need to understand automobile mechanical and electrical issues very well; if you think you lack the required knowledge or the proper tools, please consult with a specialized installer.

A professional installation will ensure your system delivers all the performance you have paid for, without affecting the safety and reliability of your vehicle.

This manual has been designed to provide you with the basic instructions required to install and use this product. However, the range of possible applications is very wide; to obtain further information, please contact your authorized Hertz dealer or Hertz service center.

You can also send an e-mail directly to the following addresses:

Italy - supporto.tecnico@elettromedia.it

Worldwide - support@elettromedia.it

4. GENERAL PRECAUTIONS




- This symbol indicates that you have to pay attention to these instructions. Disregarding them might cause accidental harms or damage your amplifier.
- Before installing the amplifier, make sure you carefully read and understand all instructions.
- The vehicle electric system must have 12V DC voltage with negative to ground. Make sure your car has it in order to avoid any damages to your amplifier and to the vehicle.
- Pre-plan the configuration of your new amplifier and the best wiring routes to ease installation.
- Always wear protective eyewear when using tools that may generate splinters.
- During installation, keep the amplifier in its packing as long as possible; this will protect it from damages.
- Secure all auxiliary devices you built to install the components to the vehicle structure through brackets, screws, nuts and bolts; this insures stability and safety while driving.
- The amplifier detachment while driving can damage the people in the vehicle and other cars. Secure the amplifier at best, paying utmost attention if installation is inside the passenger's compartment. Do not carry out any installation inside the engine compartment.
- Before installing the amplifier, turn off the source and all other electronic devices in the audio system for preventing any damages.
- Make sure the location you chose for the components does not affect the correct functioning of the vehicle mechanic and electric devices.
- Do not run the cables or install the amplifier next to electronic gearcases.
- Use extreme caution when cutting or drilling the car plate, checking there are no electrical wiring or structural element underneath.
- Before connecting the power cable to the amplifier, disconnect the negative lead (-) from the car battery.
- Make sure power cable is not short circuited during installation and connection.
- Power cable must have mechanically resistant and self-extinguishing insulation. Its section have a size corresponding with what is suggested in this manual. Avoid to run it over or through sharp edges or close to moving mechanical devices. Make sure it is well fixed all along its length. Block positive and negative cables just close to the amplifier respective power supply terminal blocks through a clamping screw.
- Use rubber grommets to protect the wire if it runs in a hole of the plate or proper materials if it is close to heat-generating parts.
- To ground the device (-) in the right way, use a screw in the vehicle chassis; scrape all paint or grease from the metal if necessary, checking with a tester that there is continuity between the battery negative terminal (-) and the fixing point. If possible, connect all components to the same ground point; this solution rejects most noise.
- Route all signal cables away from power cables.
- Never run cables outside the vehicle; you would not be protected against wear and in case of accidents.
- When installing speakers and the cables that connect them, make sure that non-insulated parts never touch, even occasionally, the vehicle cutting parts. If they do, the amplifier protection is activated.
- To prevent all problems, use very good quality cables, connectors and accessories, choosing them in Connection catalogue.
- When installation is over, and before plugging the main power supply fuse, check the system wiring and make sure all connections were done in the right way.
- Power amplifiers put an increased load on the battery and on its charging system. We recommend checking your alternator and battery condition to ensure they can handle the increased consumption. Standard electrical systems which are in good condition should be able to stand this extra load without problems but we recommend the use of an energy storage capacitor and/or a battery for high level audio systems.
- Put a fuse and its insulated fuse holder 40 cm max. far from the battery positive terminal; connect one end of the power cable to it after connecting the other end to the amplifier. The fuse value must be 50% higher than the amplifier built-in one. In case the cable supplies several amplifiers, the fuse value will have to be 50% higher than the sum of the values of all other fuses in the amplifiers.
- There must be good air circulation where the amplifier is installed; this area must not be affected by humidity, rain, external deposits or parts coming from the vehicle mechanical devices. Do not hinder in any way the cooling of the amplifier side fins
- Install the amplifier in the vehicle parts where temperature is between 0°C (32°F) and 55°C (131°F).



WARNING: When working in demanding conditions, the amplifier can reach temperatures of around 80 - 90°C (176- 194°F). Make sure it is not dangerously hot before touching it.

- Periodically clean the amplifier without using aggressive solvents that might damage it. Dampen a piece of cloth with water and soap, wring it and clean the amplifier. Then use a piece of cloth dampened with water only; eventually clean the amplifier with a dry piece of cloth.
- Remove dust and solid deposits from the heat sink side fins. Don't use compressed air on the amplifier since it would push solid parts in the amplifiers. If necessary, please contact a specialised service centre for internal cleaning. Cooling system obstruction makes the amplifier go in safety mode.


5. INSTALLATION AND SIZES

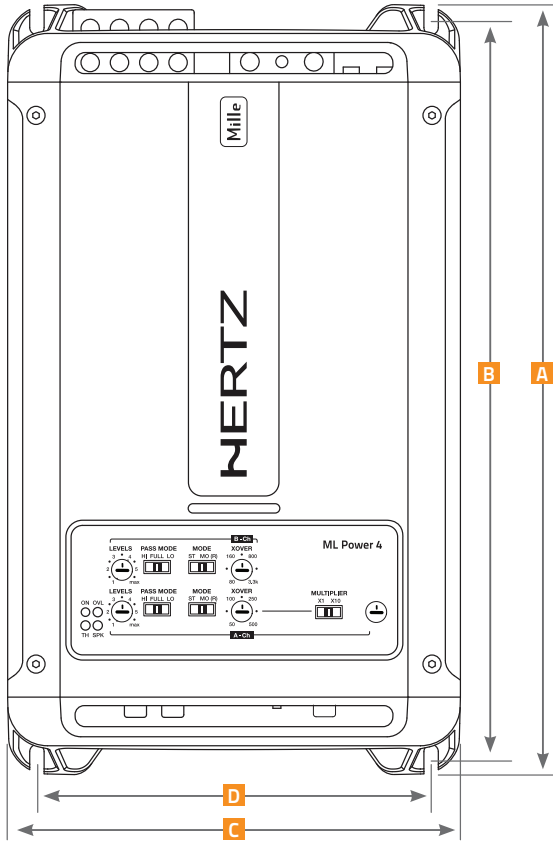


	A	B	C	D	E	
ML Power 4	289	272	170	148	46,7	mm
	11.38	10.71	6.69	5.83	1.84	in.

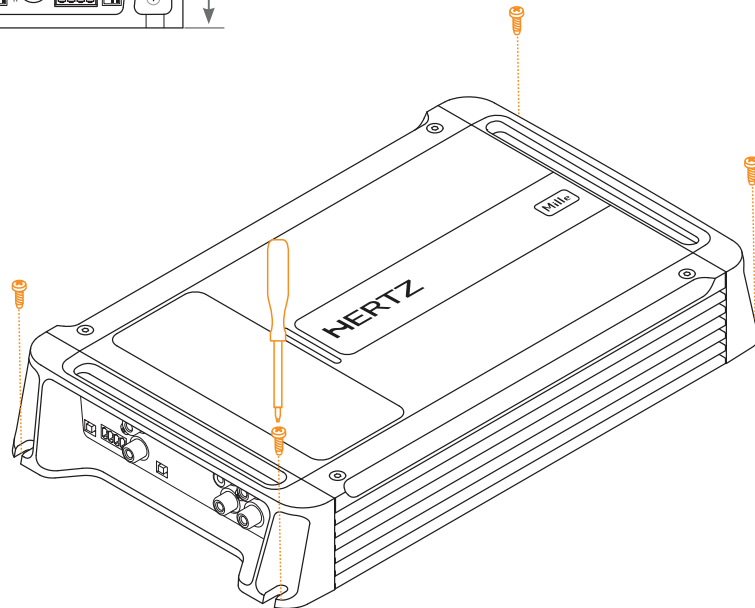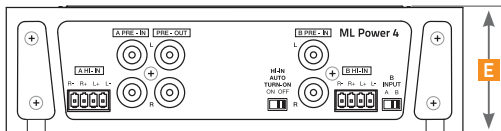


6. BATTERY / REMOTE CONNECTION AND HOW TO REPLACE THE FUSE

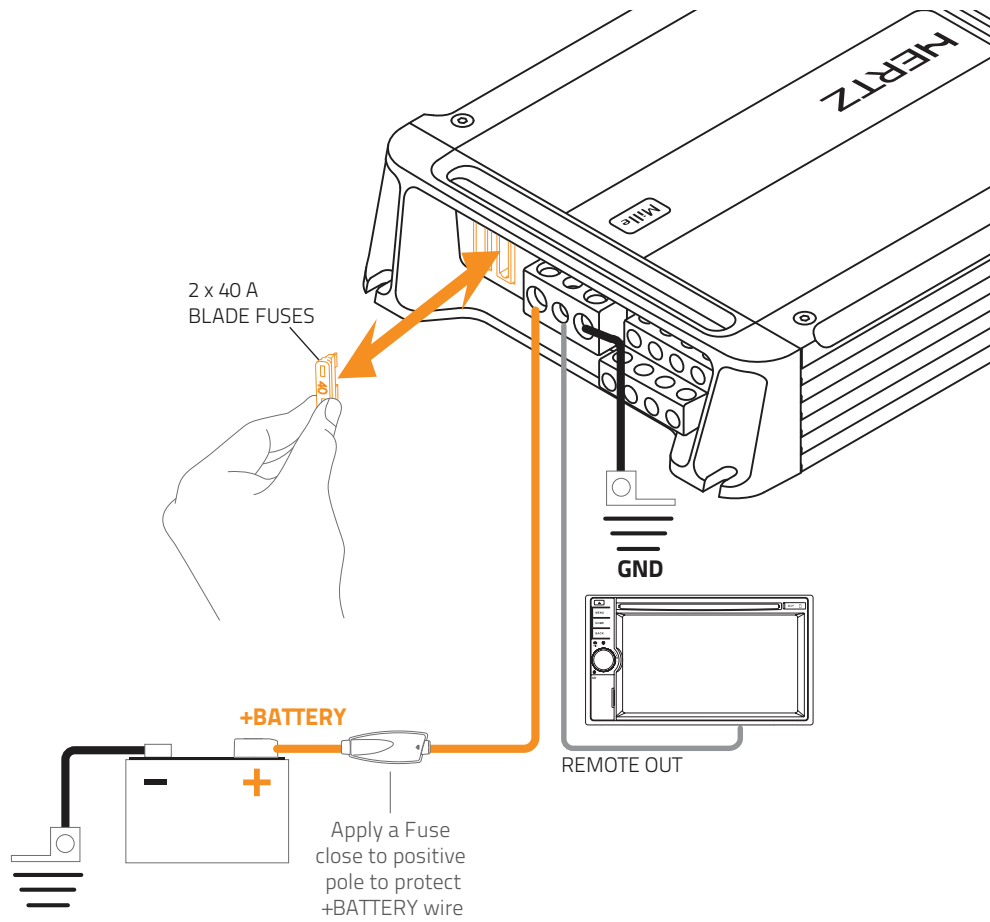

7. AUTO TURN-ON WITH HI-LEVEL INPUTS

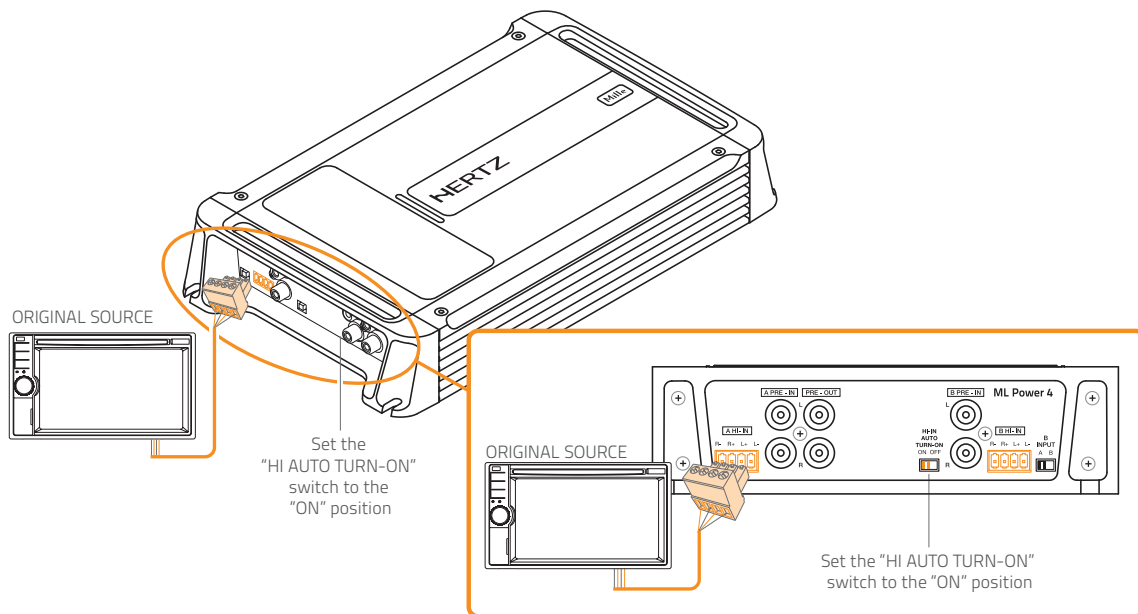


8. TOP PANEL CONTROLS: SWITCHES AND ADJUSTMENT CONTROLS

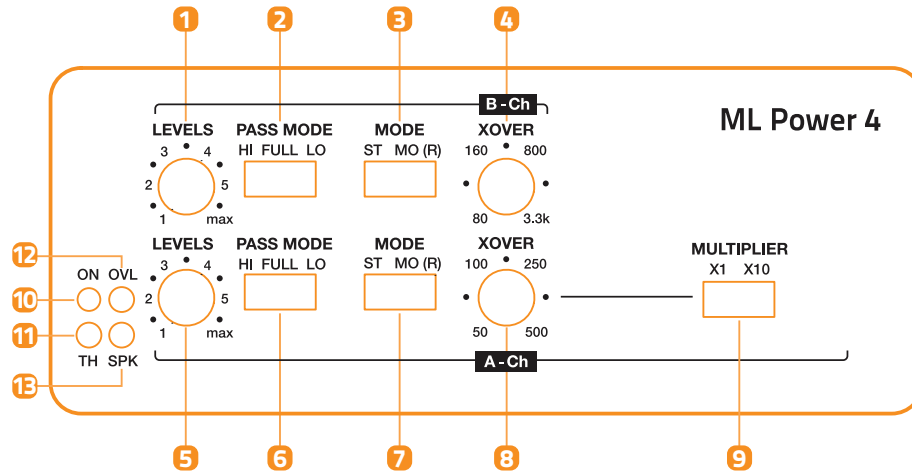

- 1 B CH LEVELS: B channels input sensitivity adjustment control.** Set to 1 position. Use a CD as source, increase head unit volume until output distorts, then decrease volume by 1 step in order to eliminate distortion. Turn LEVELS up until sound becomes distorted, then turn LEVELS down a bit for optimum sound.
- 2 PASS MODE (HI - FULL - LO): B channels filter switch.** Select FULL to drive full range power outputs. The full frequency bandwidth will be output to power output connectors. Select HI for Hi-pass to drive a MIDRANGE / TWEETER. Select LO for Lo-pass to drive a SUB / WOOFER / MIDRANGE.
- 3 MODE (ST - MO(R)): B channels mode selection.** Select ST to set B channels to stereo mode. Left and Right input signals drive Left and Right power outputs. Select MO(R) for mono (bridge) operation. With this setup the Right input channel drives BR and BL power output, so connect loudspeaker to BL- and BR+ for proper bridge connection.
- 4 XOVER (80 Hz ÷ 3.3 kHz): B channels crossover point adjustment.** Rotating the knob you can select any frequencies between 80 Hz and 3.3 kHz. The frequencies above crossover point will be attenuated at 12dB/Oct.
- 5 A CH LEVELS: A channels input sensitivity adjustment control.** Set to 1 position. Use a CD as source, increase head unit volume until output distorts, then decrease volume by 1 step in order to eliminate distortion. Turn LEVELS up until sound becomes distorted, then turn LEVELS down a bit for optimum sound.
- 6 PASS MODE (HI - FULL - LO): A channels filter switch.** Select FULL to drive full range power outputs. The full frequencies bandwidth will be output to power output connectors. Select HI for Hi-pass to drive a MIDRANGE / TWEETER. Select LO for Lo-pass to drive a SUB / WOOFER / MIDRANGE.
- 7 MODE (ST - MO(R)): A channels mode selection.** Select ST to set A channels to stereo mode. Left and Right input signals drive Left and Right power outputs. Select MO(R) for mono (bridge) operation. With this setup the Right input channel drives AR and AL power output, so connect loudspeaker to AL- and AR+ for proper bridge connection.
- 8 XOVER (50 Hz ÷ 500 Hz): A channels crossover point adjustment.** Rotating the knob you can select any frequency between 50 Hz and 500 Hz. The frequencies over crossover point will be attenuated at 12dB/Oct.
- 9 MULTIPLIER (x1 - x10): A channels crossover point multiplier.** Select X1 for normal frequency range (50 Hz - 500 Hz) of A channel filter (Hi-pass or Lo-pass). Select X10 for crossover point multiplied by 10 (500 Hz - 5 kHz).
- 10 ON: Power LED.** It lights up when you turn on the amplifier. If all LEDs (10) (11) (12) (13) turn on at the same time, the amplifier will shut down and you will have to contact a service centre.
- 11 TH: Thermal status LED.** It lights up when thermal protection is active, above 85°C. The amplifier shuts down until the chassis temperature goes below 75°C.
- 12 OVL: Overload status LED.** It lights up when overload occurs on the power output terminals. The amplifier goes in muting for 3 seconds and this LED starts flashing until you turn off the amplifier.
REMOVE THE CAUSE OF OVERLOAD.
- 13 SPK: Speaker status LED.** It lights up when a speaker touches the car body. The amplifier goes in muting for 3 seconds and this LED starts flashing until you turn off the amplifier.
REMOVE THE CONTACT BETWEEN SPEAKER WIRE AND CAR BODY.




9. FRONT AND REAR PANELS

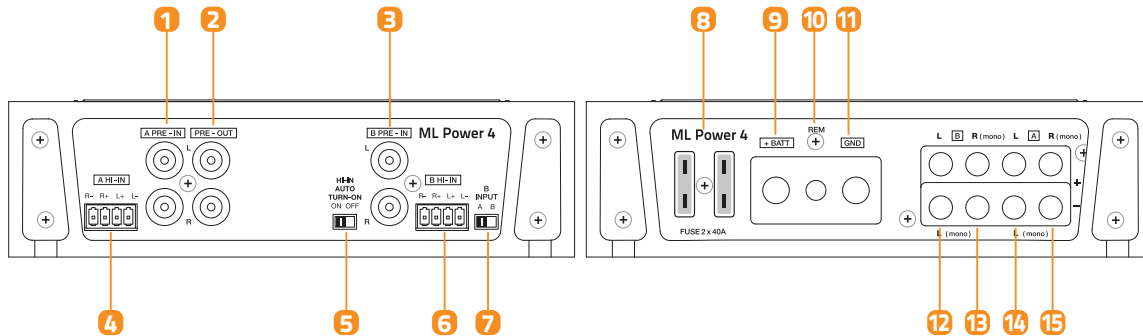




- 1 A PRE-IN:** Left and Right pre-amplified inputs to drive A channels. Connect to pre-amplified source output. Signal can be 0.2 to 5V RMS.
- 2 PRE-OUT:** This jack provides A channel Left and Right preamplified outputs to drive a separate amplifier (typical with subwoofer). These signals are full range, without crossover action.
- 3 B PRE-IN:** Left and Right pre-amplified inputs to drive B channels. Connect to preamplified source output. Signal can be 0.2 to 5V RMS.
- 4 A HI - IN:** Hi-Level signals Left and Right inputs for A channels. If the head unit does not feature a pre-amplified output, connect here its speaker wire to drive A Left and Right channels. Signal can be 0.8V to 20 V RMS.
- 5 HI - IN AUTO TURN-ON (ON - OFF):** Select ON to turn on the amplifier through the speaker power cable, if the source does not feature a 12V DC REMOTE OUT. Select OFF if REMOTE OUT from the source is available.
- 6 B HI - IN:** Hi-Level signals Left and Right inputs for B channels. If the head unit does not feature a pre-amplified output, connect here its speaker wire to drive B Left and Right channels. Signal can be 0.8V to 20 V RMS.
- 7 B INPUT (A - B):** Select A to drive B channels with A input signals. With this setup, do not connect B inputs. If the source features a REAR output, select B and connect its signals to B inputs (B PRE-IN or B HI-IN).
- 8 PROTECTION FUSE:** 2 x 40A.
- 9 POWER (+ BATT):** Terminal block for the amplifier 11÷15V DC power supply positive pole connection. Insert here the battery positive cable. The plug accepts cables up to 2 A.W.G.
- 10 REMOTE IN:** REMOTE IN terminal for the remote cable coming from the device which turns on the amplifier. Voltage must be between 7 and 16V DC.
- 11 POWER (GND):** Terminal block for the amplifier power supply negative pole connection. Insert here the battery negative cable or wire connected to the vehicle chassis. The plug accepts cables up to 2 A.W.G.
- 12 BL Speaker OUT:** B channel Left speaker + and - power terminal. For MONO (bridge) mode, connect the speaker negative terminal to BL- terminal.
- 13 BR Speaker OUT:** B channel Right speaker + and - power terminal. For MONO (bridge) mode, connect the speaker positive terminal to BR+ terminal.
- 14 AL Speaker OUT:** A channel Left speaker + and - power terminal. For MONO (bridge) mode, connect the speaker negative terminal to AL- terminal.
- 15 AR Speaker OUT:** A channel Right speaker + and - power terminal. For MONO (bridge) mode, connect the speaker positive terminal to AR+ terminal.

10. CONFIGURATION DIAGRAMS




PRE-IN A FOR WOOFER AND MID/HI

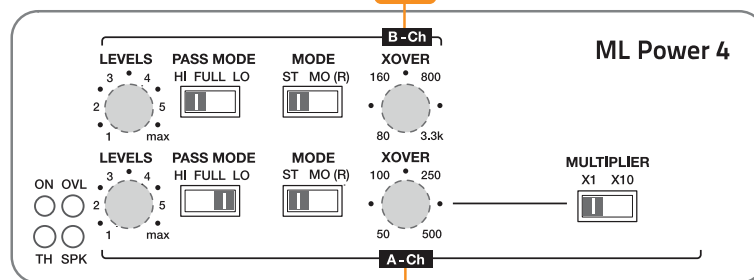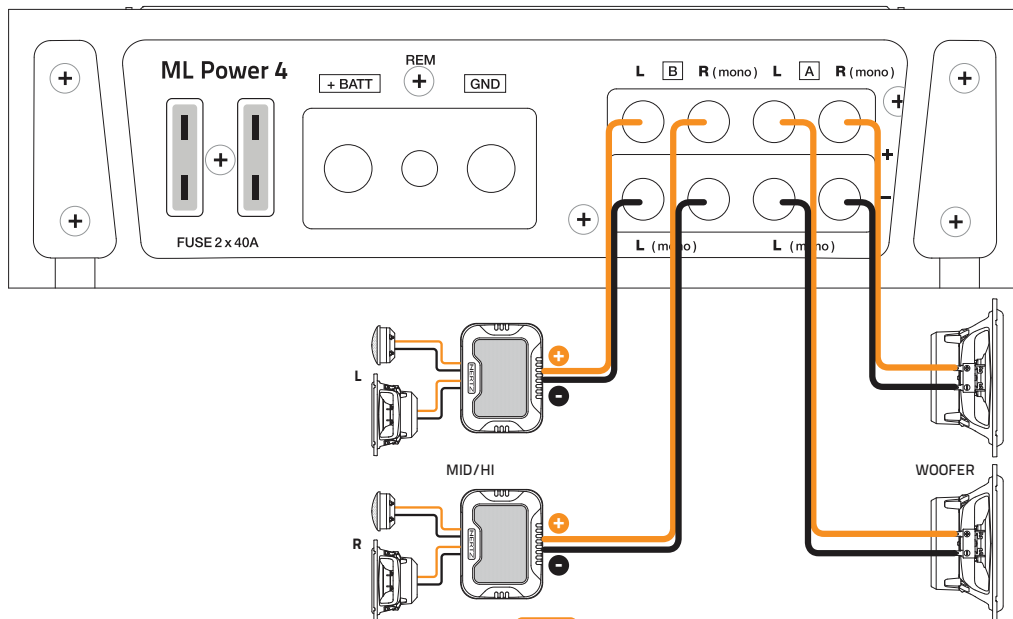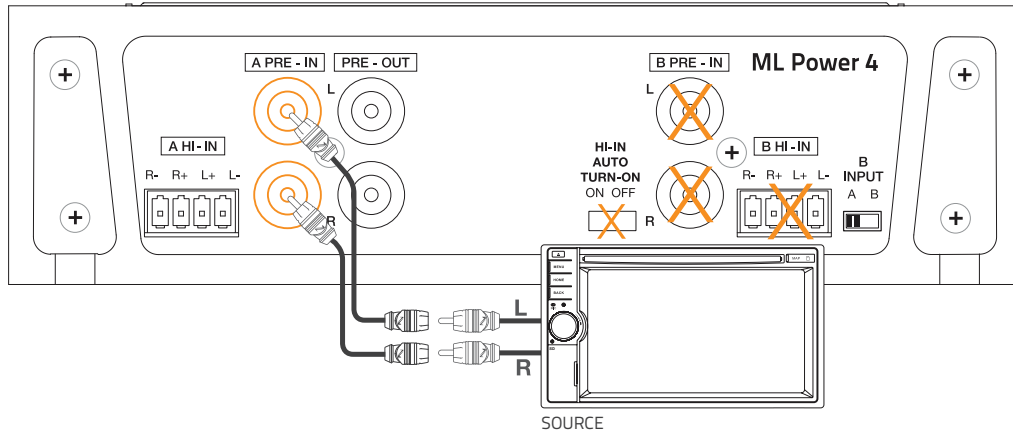




PRE-IN A / B FOR FRONT AND REAR

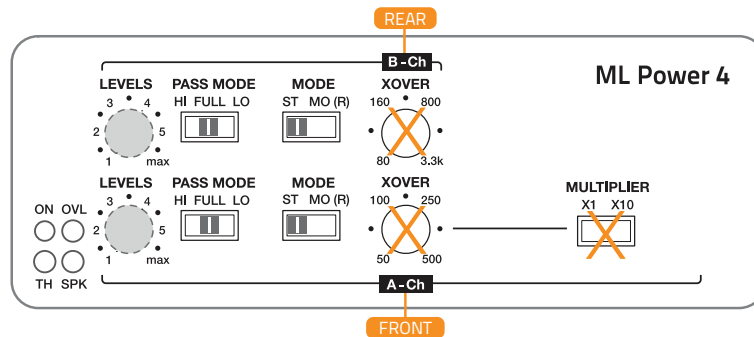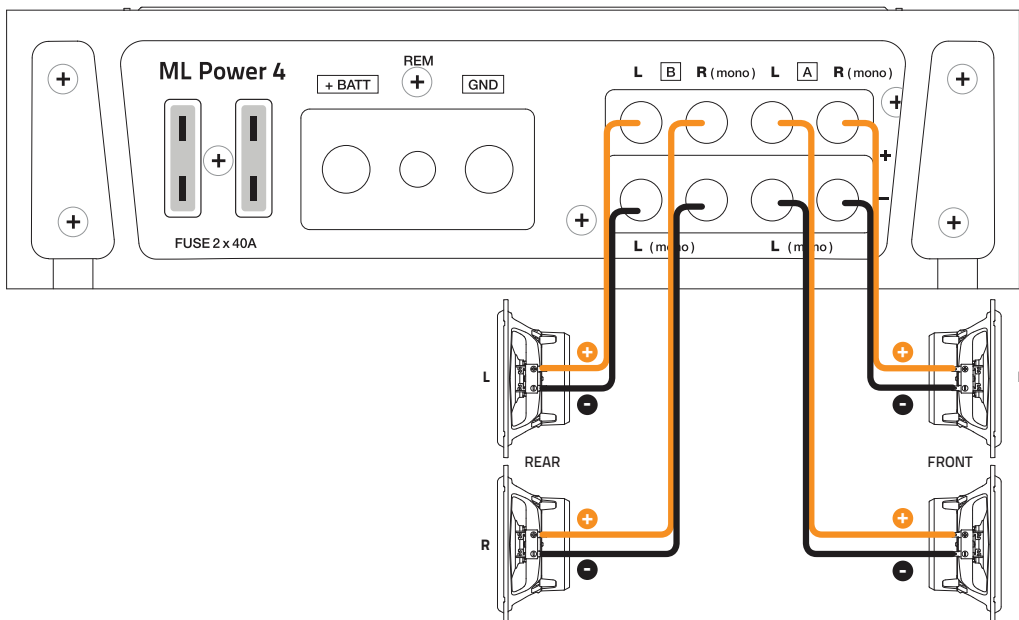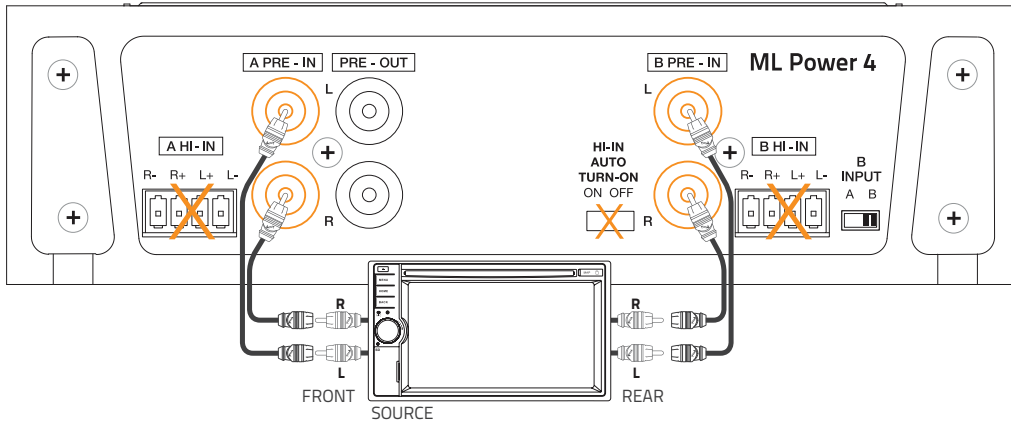




PRE-IN A AND HI-IN B FOR FRONT AND REAR

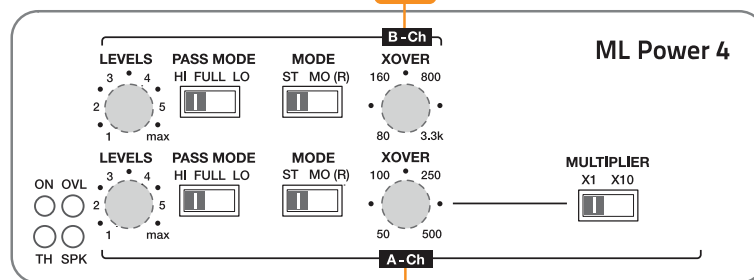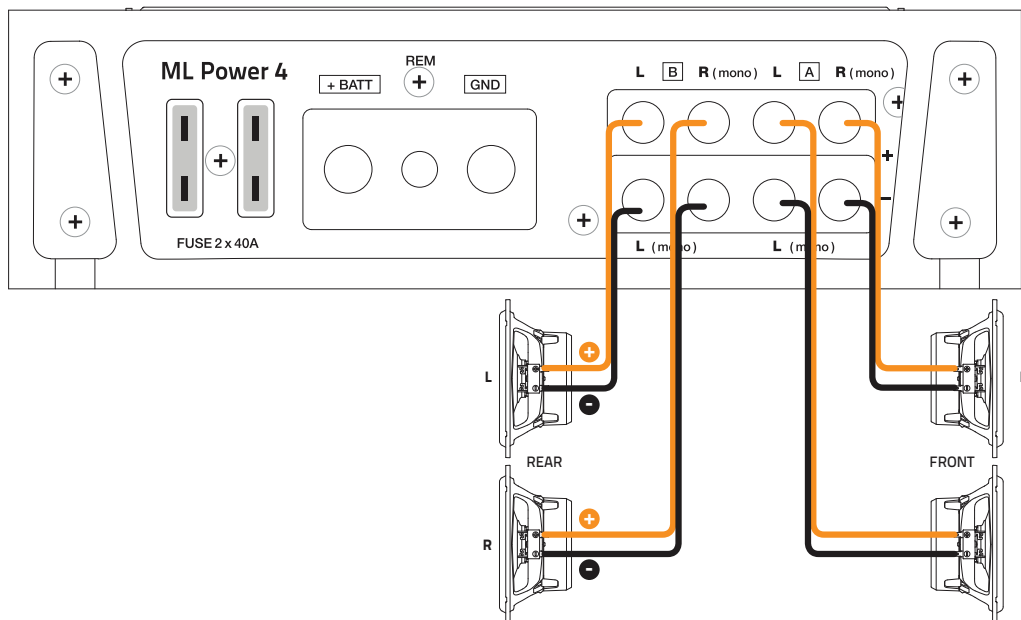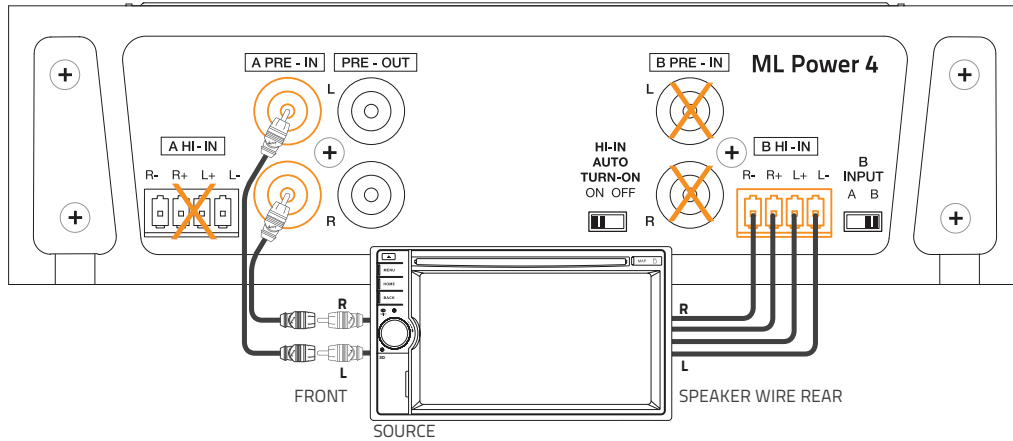




HI-IN A AND PRE-OUT

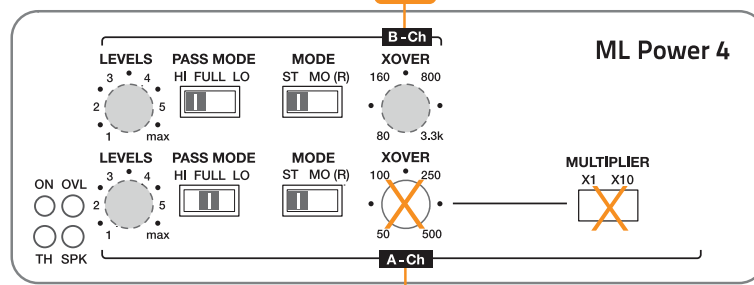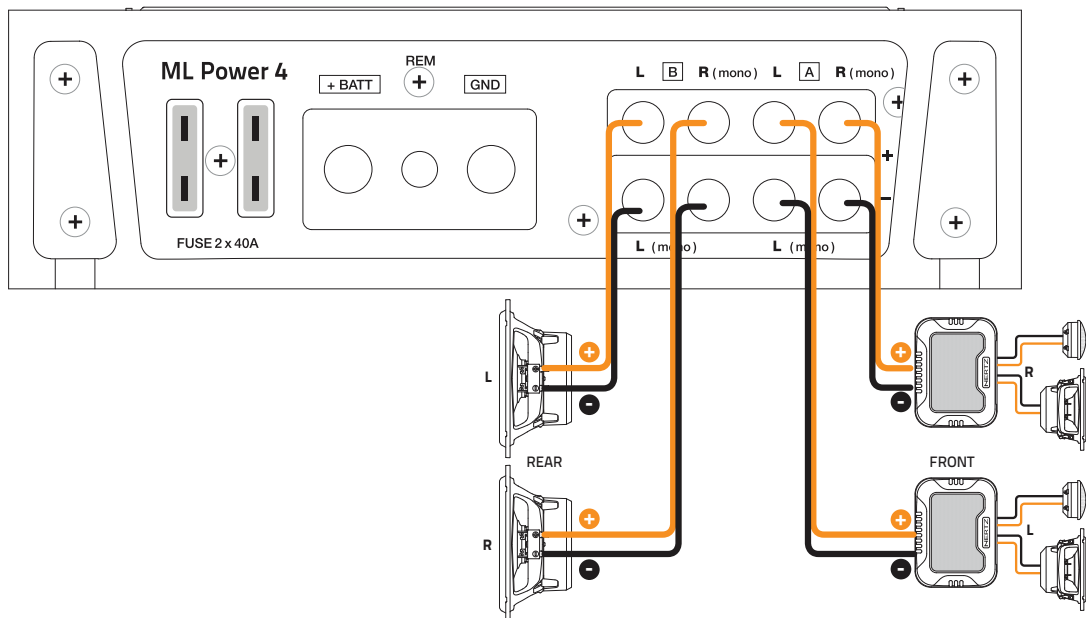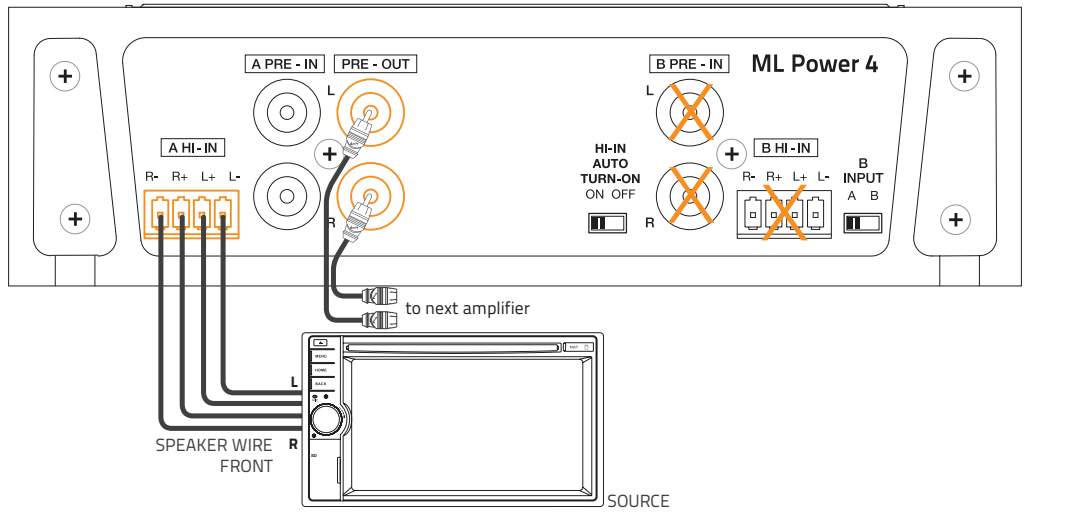




HI-IN A + B AND PRE-OUT

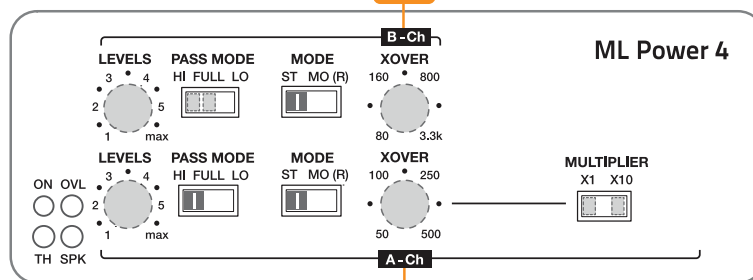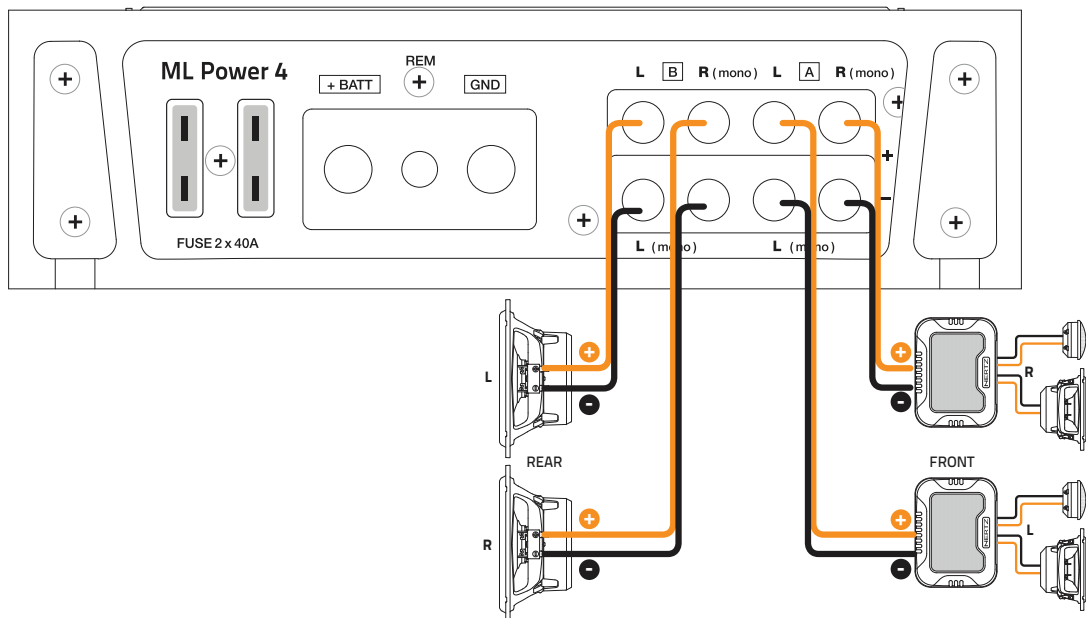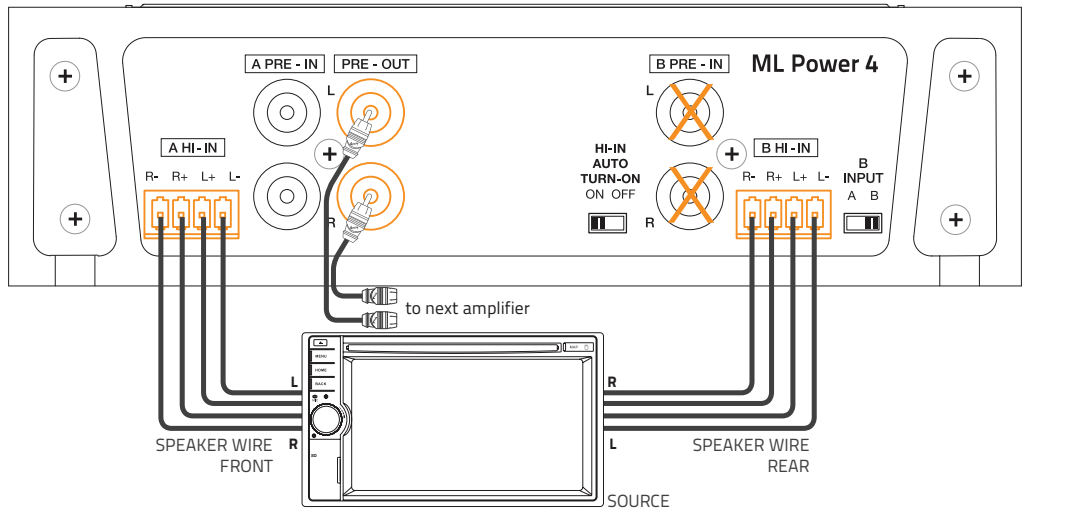




HI-IN A + B FOR FRONT AND REAR

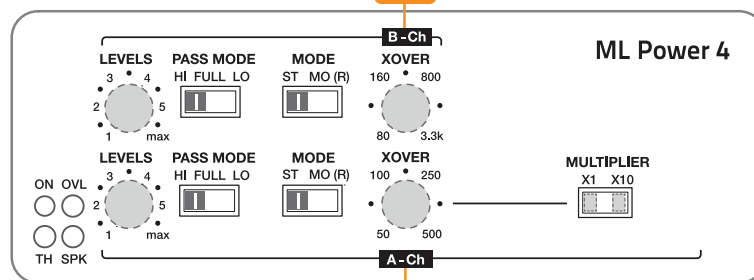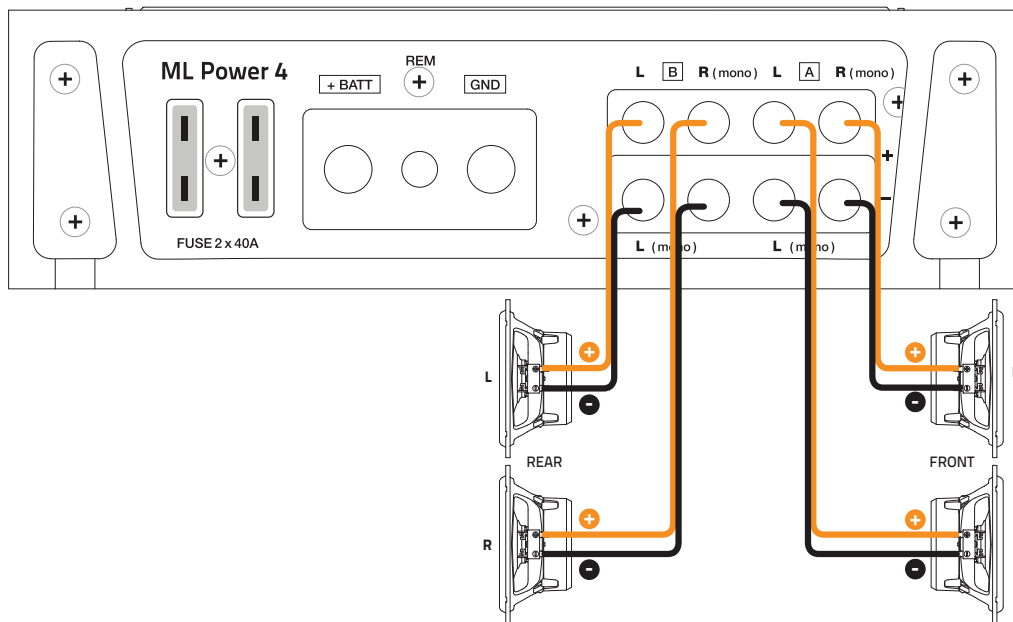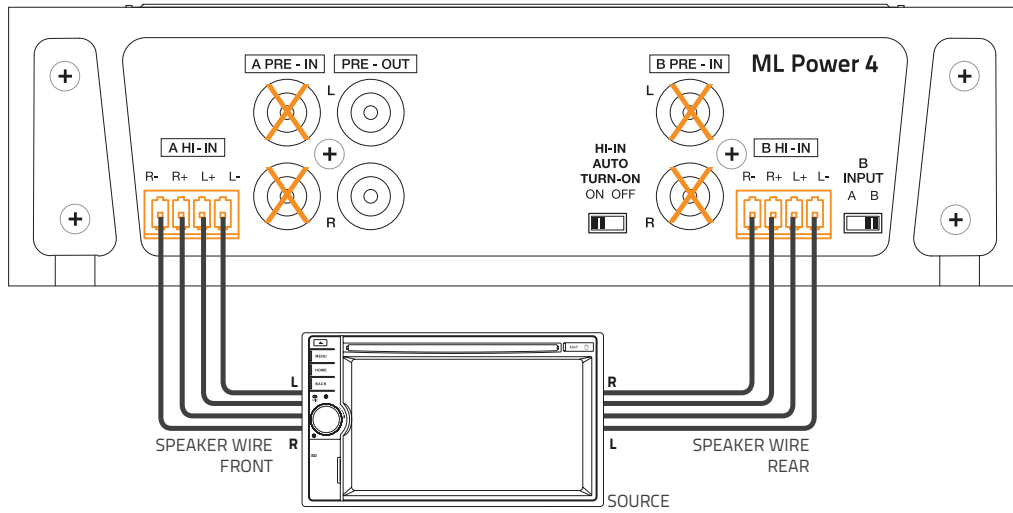

PRE-IN A FOR FRONT AND SUBWOOFER MONO (BRIDGE)

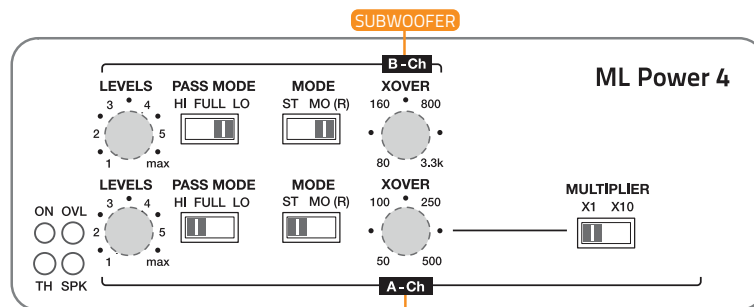
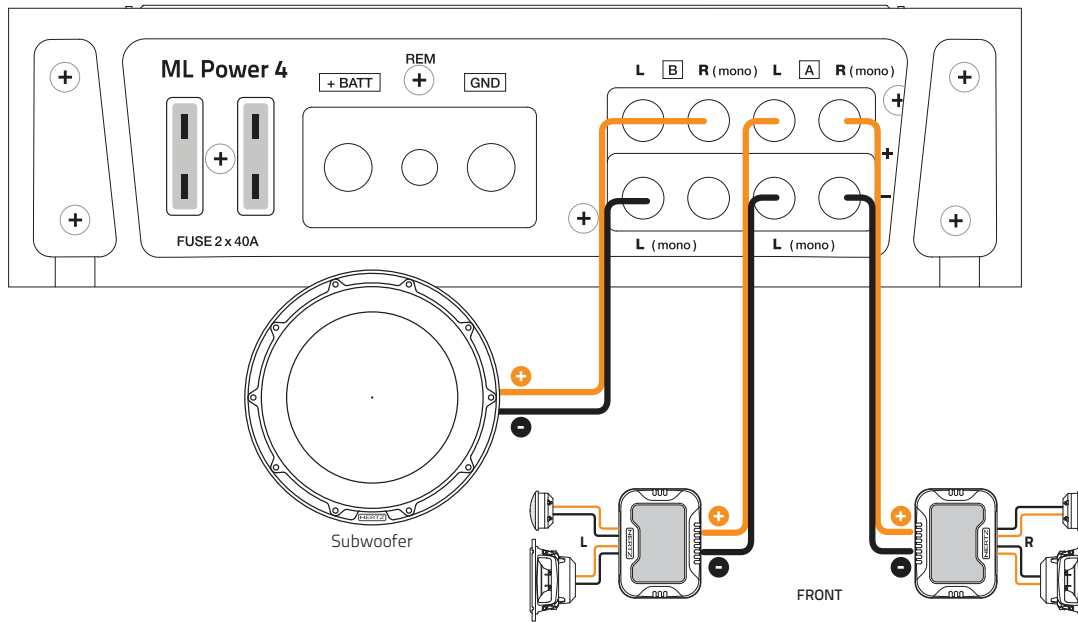
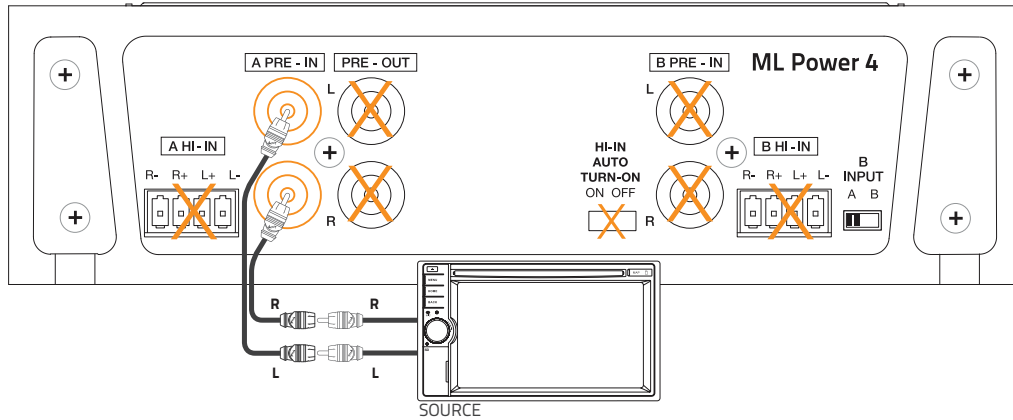


PRE-IN A + B FOR FRONT DUAL MONO (BRIDGE)

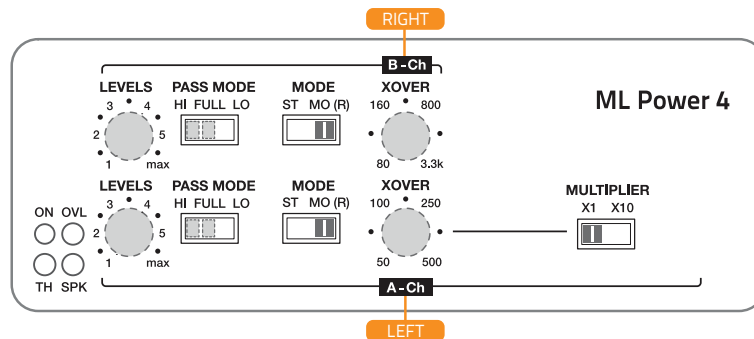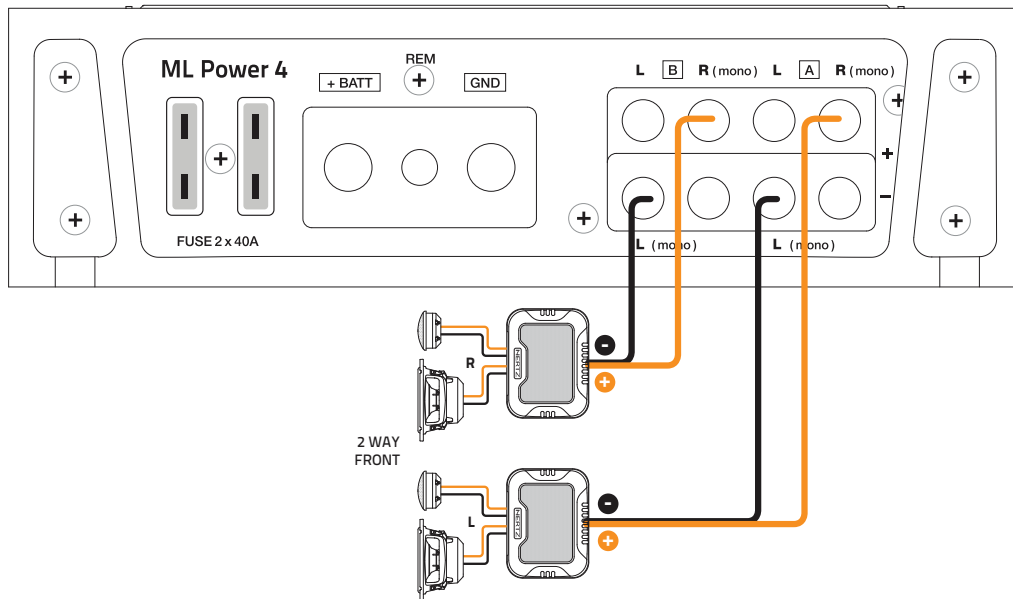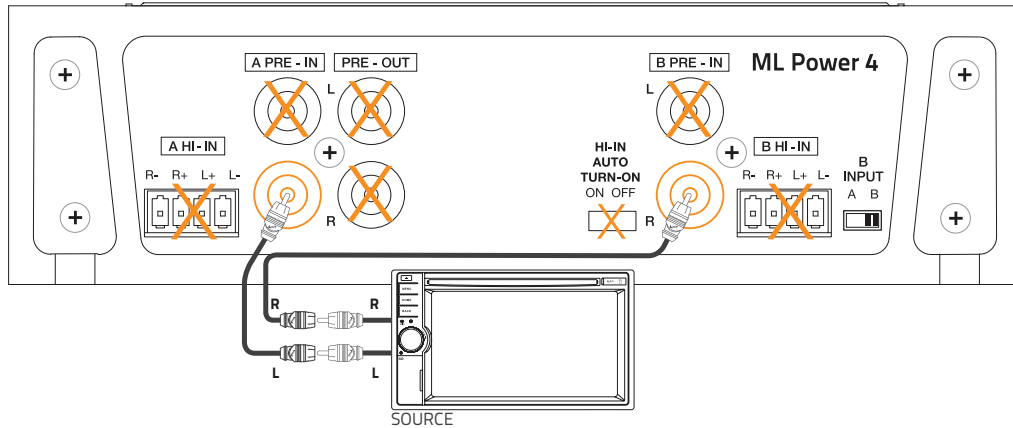

Note: select same XOVER frequency for A ch and B ch

HI-IN A AND PRE-OUT FOR WOOFER AND MID/HI

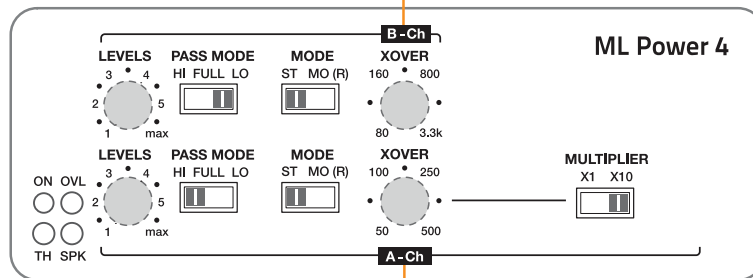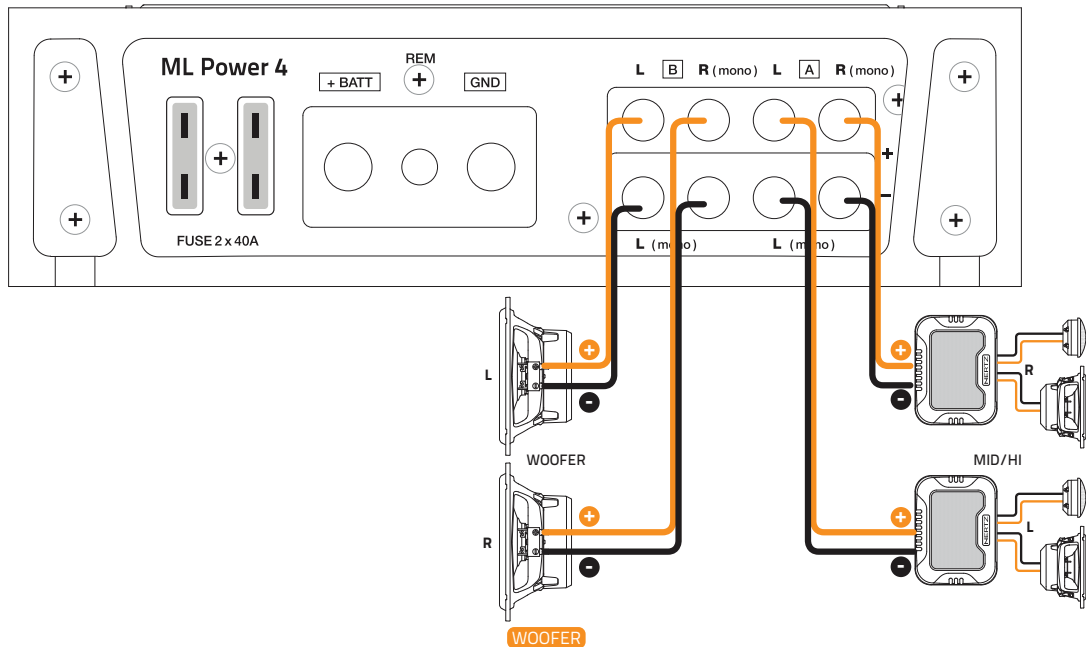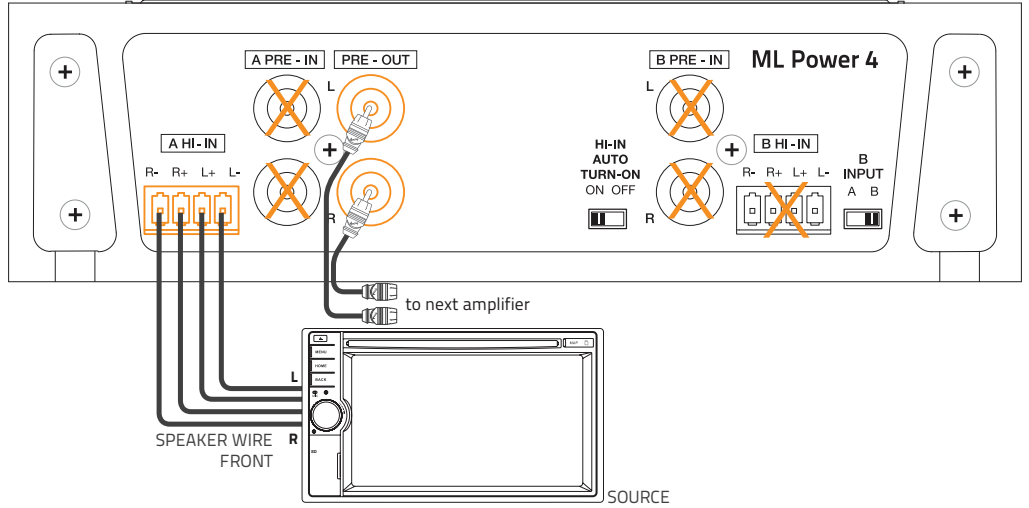

X N. A.
 ■ Selected function
 ⊙ Adjustment controls
 ■ System Start-up

Note: select same XOVER frequency for A ch and B ch


11. CABLES

Connection cables

For maximum performance, always use new, good quality cables; their outer jacket must not be spoiled, and the copper must not show oxidation. For proper operation, always consider the length of the connection, the load and the current it has to handle. Connection products are the most flexible and complete; they are designed and built in order to get the best out of every installation, especially when used with Hertz amplifiers.

Speaker cable recommendations

The table refers to continuous power into 4 Ω load. If load decreases, cable size will have to increase proportionally.

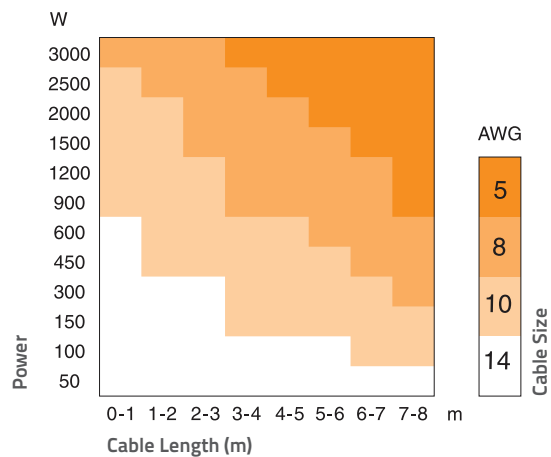

Power and Ground cable recommendations

If you don't know your system current consumption, find it using the mathematical formula below and find this same value on the left hand column of the table. Then calculate the length of your connection and find this same value on the bottom column of the table. At the point where these two values cross is the minimum section in gauge (A.W.G.) which Connection recommends for building a high performance, reliable system.

How to calculate your system current consumption

$$I = \frac{TP \times 2}{V_{batt}}$$

I = Current consumption of your system in ampere (A);

TP = Total power (RMS) of channels of all amplifiers in your system;

V_{batt} = Usually value is 12 V, the nominal automotive electrical system voltage.


Example:

- Your total system power (RMS) of all channels in all amplifiers is a combined 650 W.
- Your amplifier average is 50% efficiency, as most amplifiers today.
- Your electrical system is 12 V.

$$I = \frac{650 \times 2}{12} = 108,3 \text{ A Current consumption}$$

Power & Ground cable calculation table		Cable Size	
Minimum gauge size recommended for MAINPOWER & POWER FLOW cables. MAINPOWER cables ensure higher instantaneous current transfer.		A.W.G.	mm ²
240-350		1/0	53,5
180-240		2	33,6
150-180		4	21,2
120-150		8	8,4
100-120		10	5,3
80-100		12	3,3
60-80		14	2,1
40-60		16	1,3
20-40		18	0,8
8-20			
0-8			
	0-1 1-2 2-3 3-4 4-5 5-6 6-7 7-8		

12. BLOCK DIAGRAM

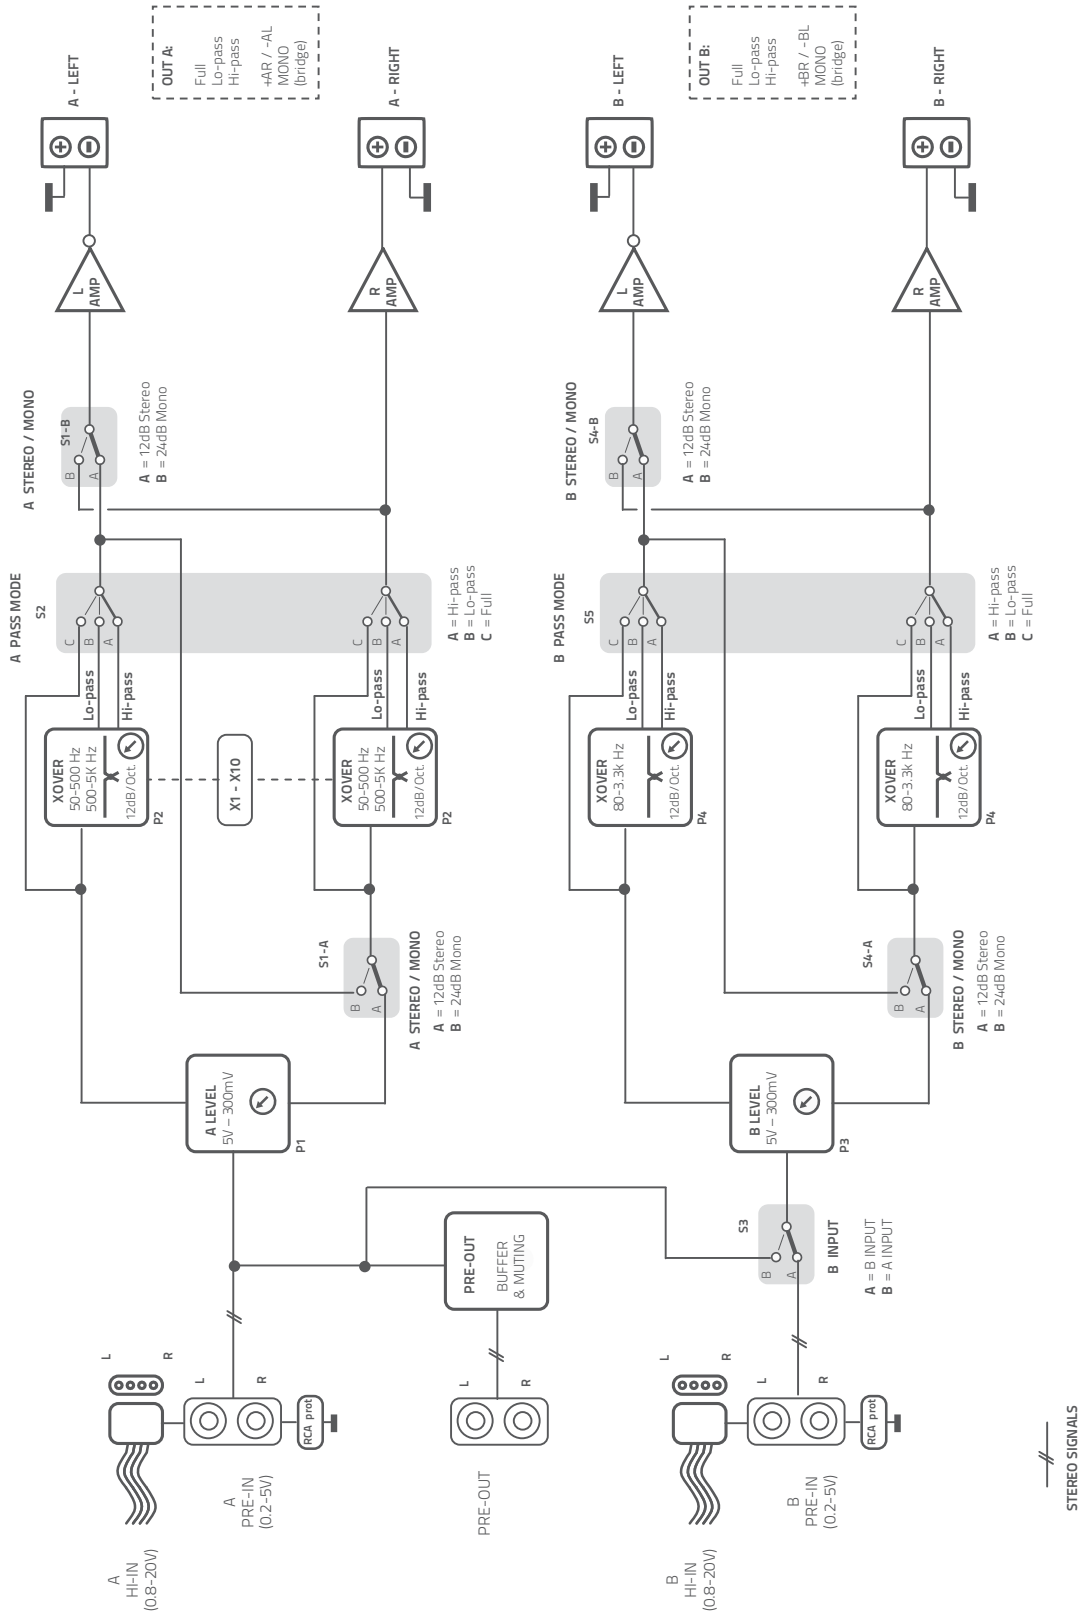

13. TECHNICAL SPECIFICATIONS

Power Supply	
Power supply voltage / fuse:	11+15 VDC
Idling current:	1,5 A
Idling current when OFF:	0.04 mA
Consumption @ 2Ω, 14.4 VDC (Max Musical Power):	50 A
Remote In:	4 + 15 VDC - 1 mA
ART™:	Automatic Remote Turn-On/Off with Speaker-In
Fuse:	2 x 40 A

Amplifier Stage	
Distorsion - THD (100 Hz @ 4Ω):	0.08 %
Bandwidth (-3 dB):	5 + 55k Hz
S/N Ratio (A weighted @ 1 V):	100 dB
Damping factor (100 Hz @ 4Ω):	80
Pre-In sensitivity:	0.2 + 5 V RMS
Pre-In impedance:	15 kΩ
Speaker-In sensitivity:	0.8 + 20 V RMS
Speaker-In impedance:	470 Ω
Load impedance:	
4 Ch:	2Ω
4 Ch:	2 x 2Ω + 1 x 4Ω
2 Ch:	4Ω
Output Power (RMS) @ 14.4 VDC, THD 1%:	
4 Ch:	150 W x 4 (4Ω)
1 Ch:	250 W x 4 (2Ω)
3 Ch:	150 W x 2 (4Ω) + 500 W x 1 (4Ω)
3 Ch:	250 W x 2 (2Ω) + 500 W x 1 (4Ω)
2 Ch:	500 W x 2 (4Ω)
CEA 2006-A Ratings:	
RMS Power (4Ω, ≤1 %THD+N, 14.4 V):	120 W x 4 Ch
S/N Ratio (ref. 1 W output):	80 dBA



Inputs / Outputs / Filter	
INPUTS:	PRE IN / SPEAKER IN
OUTPUTS:	Pre OUT
A Ch Filters: Full/Hi-Pass/Lo-Pass:	50 + 5k Hz (2 range) @ 12 dB/Oct.
B Ch Filters: Full/Hi-Pass/Lo-Pass:	80 + 3.3k Hz @ 12 dB/Oct.

Size / Weight	
Max size (mm / in.):	289 x 170 x 46,7 / 11.38 x 6.69 x 1.84
Weight (kg / lb.):	2,45 / 5.4

Technology *Art-Sound*
Manufactured by
elettromedia spa

All Specifications Subject to Change Without Notice

HERTZ

PART OF **ELETTROMEDIA** - 62018 Potenza Picena (MC) Italy - T +39 0733 870 870 - F +39 0733 870 880 - www.elettromedia.it



ML Power QUICK START GUIDE

rev 1.0 a

Il Manuale Utente è disponibile
anche sul nostro sito
www.hertzaudiovideo.com

The User's Manual is also
available on our web site
www.hertzaudiovideo.com

Index

1. PRECAUTIONS	8
2. INSTALLATION AND SIZES	34
3. CABLE SIZE CALCULATION TABLES. A: POWER SUPPLY / B: SPEAKERS	34
4. POWER SUPPLY and REMOTE IN CONNECTION / FUSE REPLACEMENT	35
5. PRE IN / SPEAKER IN / PRE OUT	36
6. AUTO TURN-ON BY SPEAKER IN (without REMOTE IN)	37
7. INSTALLATION EXAMPLES:	38

X: Not AVAILABLE	○ — □ : Set-up CONTROLS	○ — □ : Adjustment CONTROLS
------------------	-------------------------	-----------------------------

1. PRECAUTIONS

English / English

Before installing the components, please carefully read all of the instructions contained in this manual. It is advisable to carefully follow the highlighted instructions. Failure to respect these instructions may cause unintentional harm or damage to the components.

SAFETY CONSIDERATIONS

1. Make sure your car has 12 VDC voltage negative ground electric system.
2. Check your alternator and battery condition to ensure they can handle the increased consumption.
3. Do not carry out any installation inside the engine compartment or exposed to water, excessive humidity, dust or dirt.
4. Never run cables outside the vehicle or install the amplifier next to electronic gearcases.
5. Install the amplifier in the vehicle parts where temperature is between 0°C (32°F) and 55°C (131°F). Let the amplifier outer profile be at least 5 cm (2") far from possible walls. There must be good air circulation where the amplifier is installed. If you cover the heat sink, the amplifier goes in protection.
6. The amplifier can reach temperatures of around 80°C (176°F). Make sure it is not dangerously hot before touching it.
7. Periodically clean the amplifier without using aggressive solvents that might damage it. Don't use compressed air, since it would push solid parts in the amplifiers. Dampen a piece of cloth with water and soap, wring it and clean the amplifier. Then use a piece of cloth dampened with water only; eventually clean the amplifier with a dry piece of cloth.
8. Make sure the location you chose for the components does not affect the correct functioning of the vehicle mechanical and electrical devices.
9. Make sure power cable is not short circuited during installation and connection with the battery.
10. Use extreme caution when cutting or drilling the car plate, checking there are no electrical wiring or structural element underneath.
11. When positioning the power supply cable, avoid to run the wire over or through sharp edges or close to moving mechanical devices. Use rubber grommets to protect the wire if it runs in a hole of the plate or proper materials if it is close to heat-generating parts.
12. Make sure all the cables are properly secured all along their length. Also, make sure their outer protective jacket is flame resistant and self extinguishing. Use a clamping screw to secure positive and negative cables just close to the amplifier respective power supply terminal blocks.
13. Choose the cable gauge according to the amplifier power and to the suggestions you can find here. Use high quality cables, connectors and accessories, as you can find in the Connection catalogue.
14. Pre-plan the configuration of your new amplifier and the best wiring routes to ease installation.
15. In order to avoid incidental damage, keep the product in the original packaging until you are ready for the final installation.
16. Always wear protective eyewear when using tools, as splints or product residue may become airborne.

TYPICAL INSTALLATION SEQUENCE

If you have any questions please refer to the Advanced Manual you can find available on www.hertzaudiovideo.com or contact your Hertz dealer or Hertz authorized service for assistance.

1. Before installing the amplifier turn off the source and all other electronic devices in the audio system to prevent any damages.
2. Using a cable with adequate AWG (see chart: Power Supply Cable), run the power wire from the battery location to the amplifier mounting location.
3. Connect the power supply with the correct polarity. connect (+) terminal to the cable coming from the battery and (-) terminal to the car chassis.
4. Put an insulated fuse holder 40 cm max far from the battery positive terminal; connect one end of the power cable to it after connecting the other end to the amplifier. Do not mount the fuse.
5. To ground the device (-) in the right way, use a screw in the vehicle chassis; scrape all paint or grease from the metal if necessary, checking with a tester that there is continuity between the battery negative terminal (-) and the fixing point. If possible, connect all components to the same ground point; this solution rejects most noise which can be generated during the audio reproduction.
6. Route all signal cables close together and away from power cables.
7. Connect the RCA input cables, the applied signal must be between 0.2 VRMS and 5 VRMS.
8. Connect the high level inputs using the proper plug. Applied signal must be between 0.8 VRMS and 20 VRMS. Don't use it if you are already using Pre In preamplified connection.
9. Connect the speaker output using 10 AWG max speaker cable.
10. Don't connect (-) L and (-) R speaker outputs together. If you use an external stereo crossover, make sure that its negative poles are not connected together.
11. The amplifier turns on by connecting the remote turn on terminal (REMOTE IN) to the source specific output. The amplifier turns on automatically, without remote signal, also if using high level inputs (Speaker IN) by setting the "AUTO TURN ON" switch to position ON.
12. The LED on the front panel lights up green indicating that the product is on. The LED lights up red if the outputs go on overload, if the thermal protection is triggered, if the speaker cables short circuit with the vehicle chassis and if the amplifier is malfunctioning.
13. The fuse/s is/are located near the power supply and speaker terminals. To replace, remove the fuse/s from the housing. Always replace the fuse of the same rating.
14. Secure all auxiliary devices you built to install the components to the vehicle structure; this insures stability and safety while driving. The amplifier detachment while driving can seriously damage the people in the vehicle and other cars.
15. When installation is over, check the system's wiring and make sure all connections were done in the right way.
16. Put the fuse into the fuse holder. The fuse value will have to be 30% higher than the amplifier built-in one. In case the cable supplies several amplifiers, the fuse value will have to be 30% higher than the sum of the values of all other fuses in the amplifiers.
17. Listening level calibration is made by adjusting the source volume up to ¾ of its maximum level; then, adjust the amplifier levels until you hear distortion.
18. Warranty Certificate: please check out the Hertz website for further information.

SAFE SOUND


USE COMMON SENSE AND PRACTICE SAFE SOUND. PLEASE REMEMBER THAT LONG EXPOSURE TO EXCESSIVELY HIGH SOUND PRESSURE LEVELS MAY DAMAGE YOUR HEARING. SAFETY MUST BE AT THE FOREFRONT WHILE DRIVING.

**Information on electrical and electronic equipment waste (for those European countries which organize the separate collection of waste)**


Products which are marked with a wheeled bin with an X through it can not be disposed of together with ordinary domestic waste. These electrical and electronic products must be recycled in proper facilities, capable of managing the disposal of these products and components. In order to know where and how to deliver these products to the nearest recycling/disposal site please contact your local municipal office. Recycling and disposing of waste in a proper way contributes to the protection of the environment and to prevent harmful effects on health.

ML Power

2. INSTALLATION AND SIZES

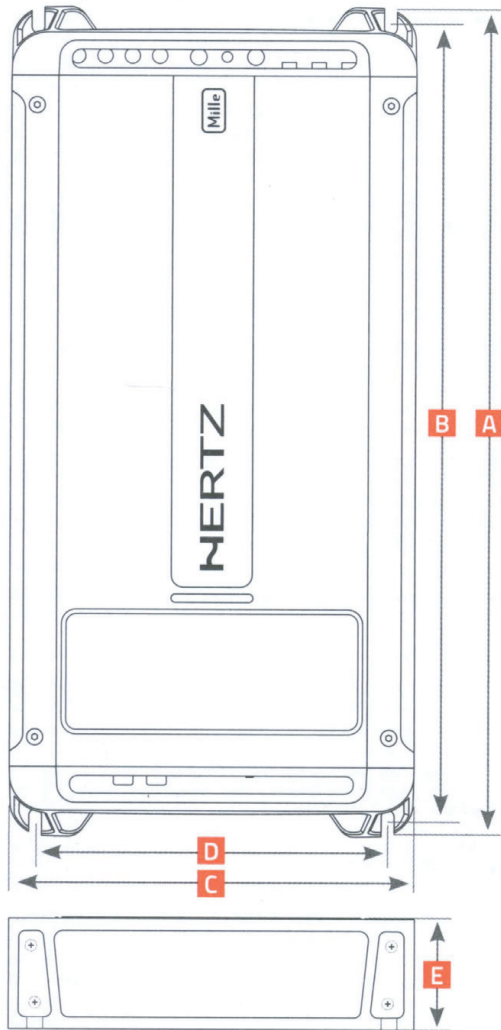

	A	B	C	D	E	
ML POWER 1	349	332	170	148	46.7	mm
	13.74	13.07	6.69	5.82	1.84	in.
ML POWER 4	289	272	170	148	46.7	mm
	11.38	10.7	6.69	5.82	1.84	in.
ML POWER 5	349	332	170	148	46.7	mm
	13.74	13.07	6.69	5.82	1.84	in.

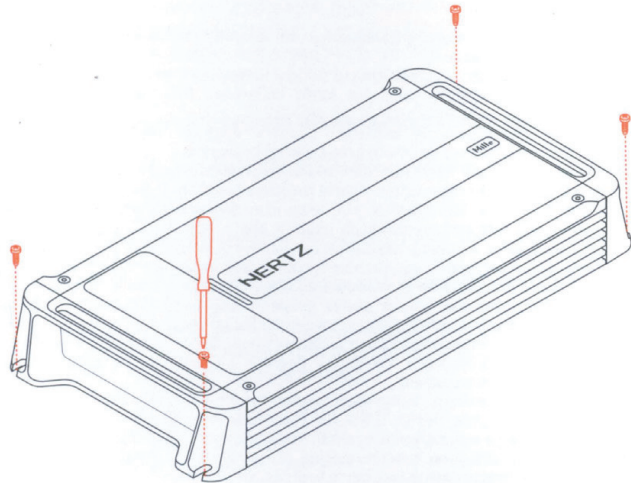

3. CABLE SIZE CALCULATION TABLES: A: Power supply cable / B: Speakers cable


A: Power supply cable

Power & Ground cable calculation table		Cable Size	
Minimum gauge size recommended for MAINPOWER & POWER FLOW cables. MAINPOWER cables ensure higher instantaneous current transfer.		AWG.	mm²
240-350		1/0	53,5
180-240		2	33,6
150-180		4	21,2
120-150		8	8,4
100-120		10	5,3
80-100		12	3,3
60-80		14	2,1
40-60		16	1,3
20-40		18	0,8
8-20			
0-8			


*Current Draw I (A)	0-1	1-2	2-3	3-4	4-5	5-6	6-7	7-8
240-350								
180-240								
150-180								
120-150								
100-120								
80-100								
60-80								
40-60								
20-40								
8-20								
0-8								

Cable length (m)


B: Speakers cable

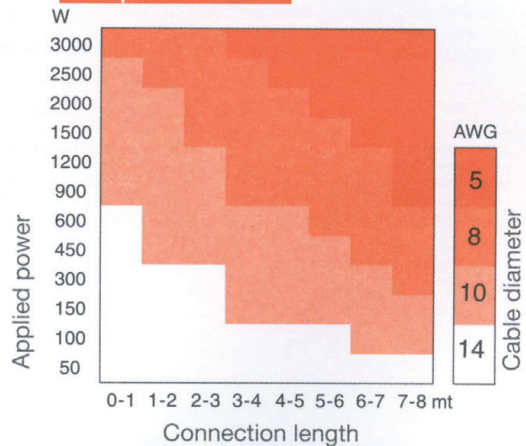

4. POWER SUPPLY and REMOTE IN CONNECTION / FUSE REPLACEMENT

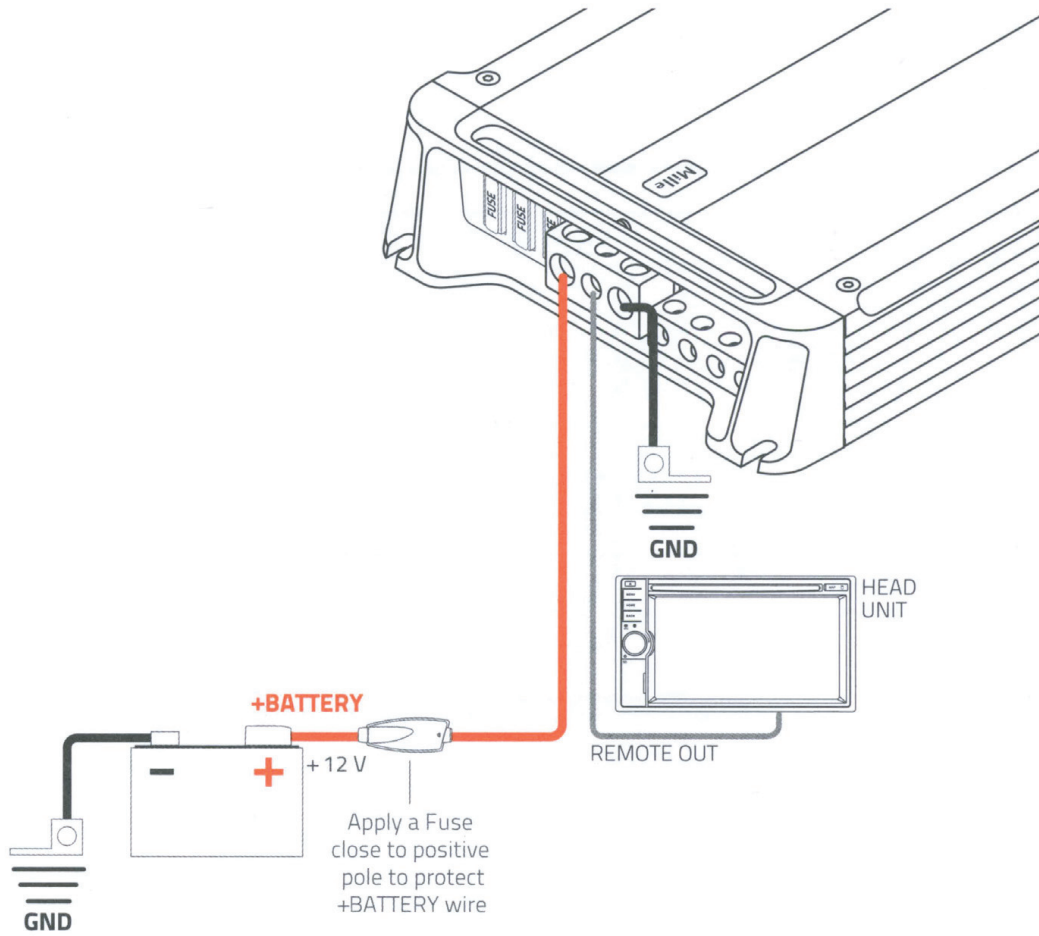


MODEL	FUSE
ML POWER 1	3 x 40 A
ML POWER 4	2 x 40 A
ML POWER 5	2 x 40 A

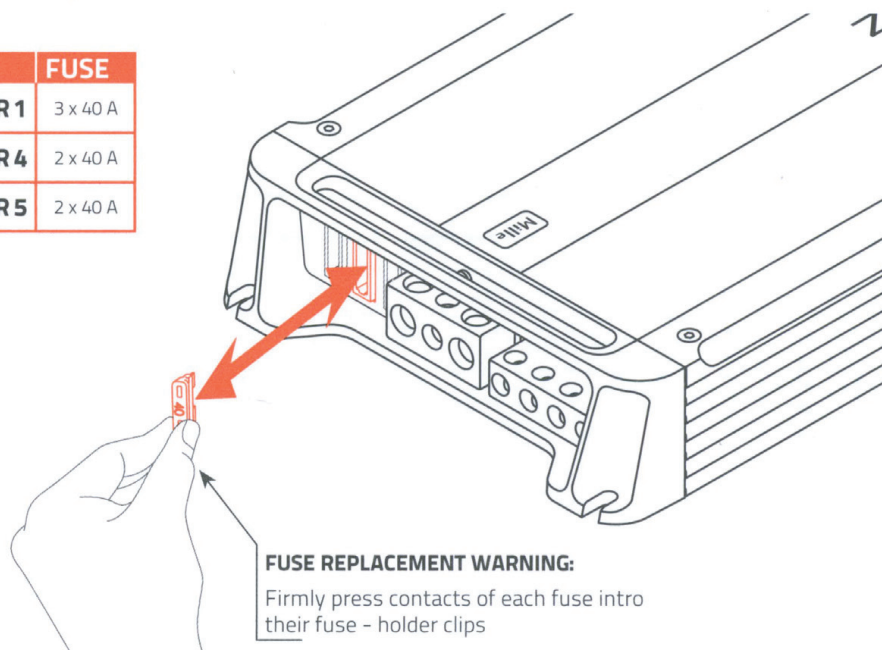


ML Power

5. PRE IN / SPEAKER IN / PRE OUT

PRE INPUTS


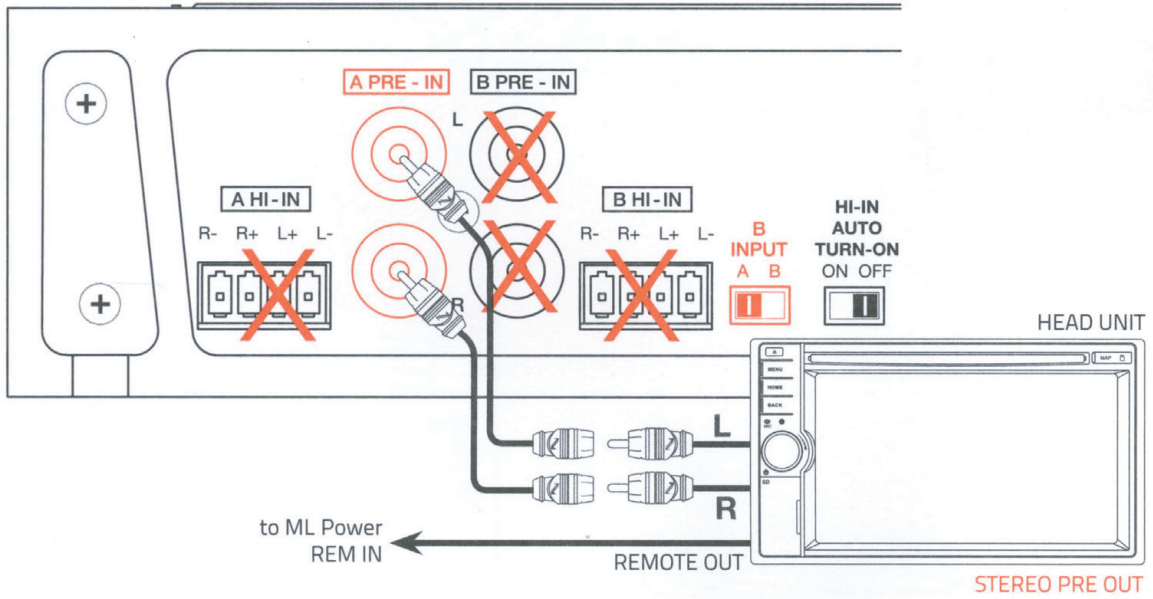


HI LEVEL INPUTS

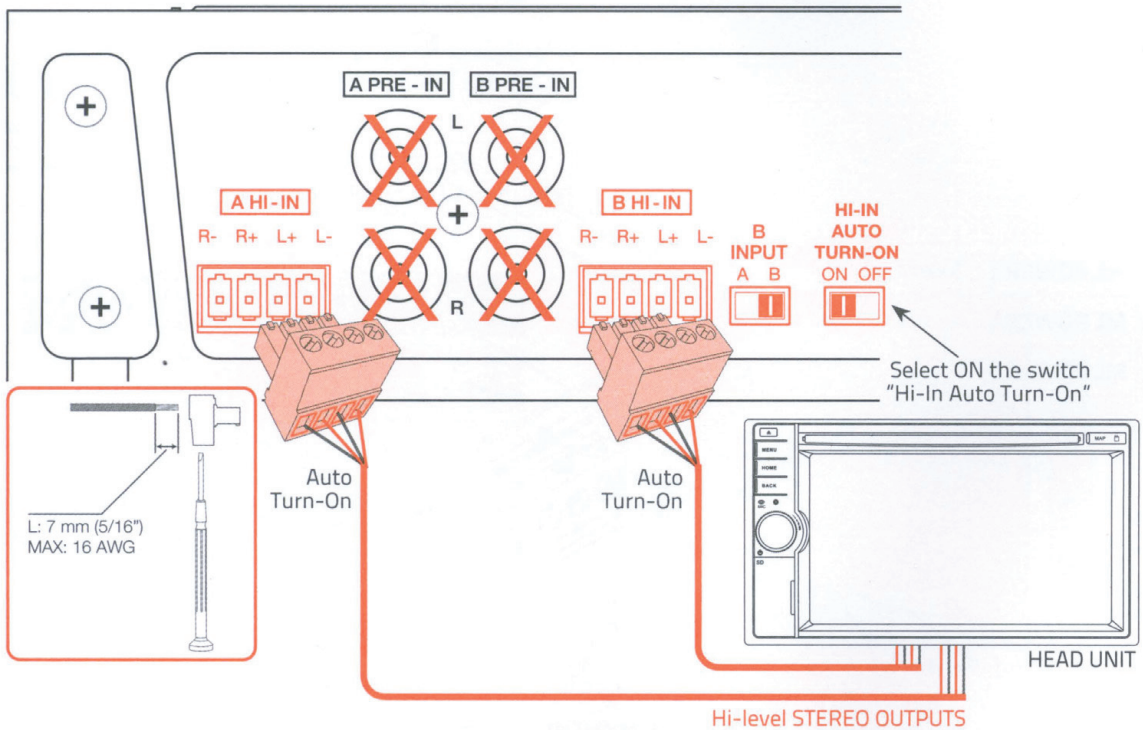

X	Not AVAILABLE	○ — □	Set-up CONTROLS	○ — □	Adjustment CONTROLS
---	---------------	-------	-----------------	-------	---------------------


6. AUTO TURN ON BY SPEAKER IN (without REMOTE IN)

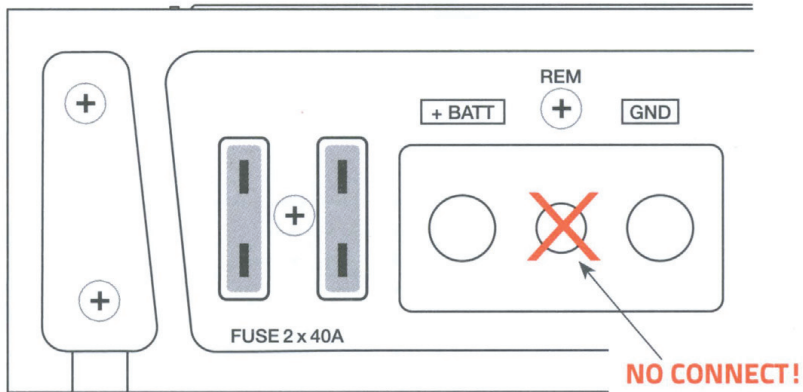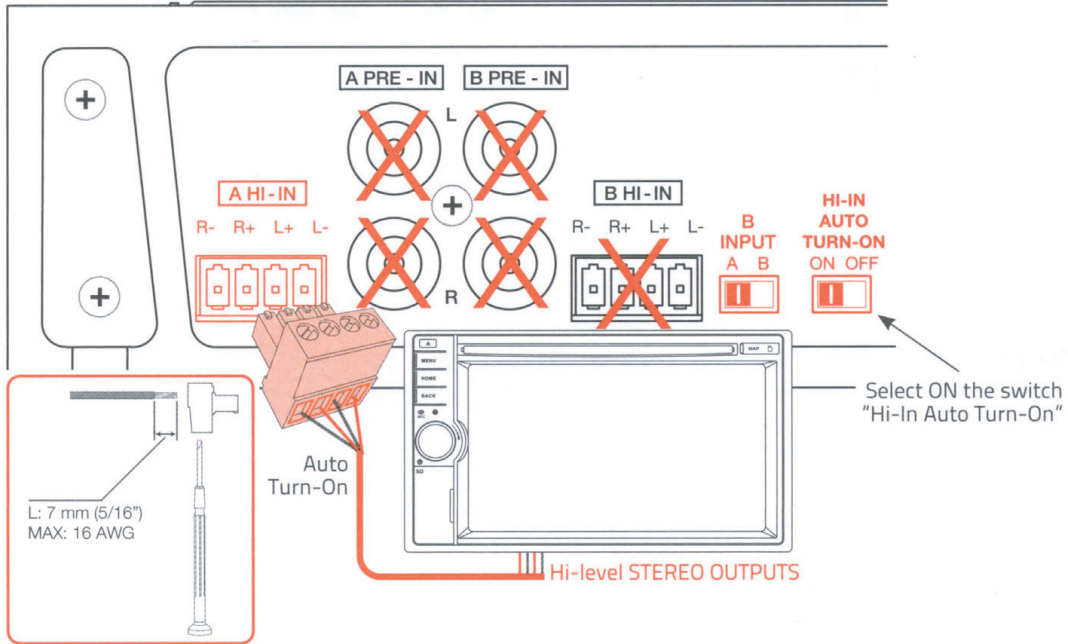


X: Not AVAILABLE ○ — □: Set-up CONTROLS ○ — □: Adjustment CONTROLS

7. INSTALLATION EXAMPLES

ML POWER 1

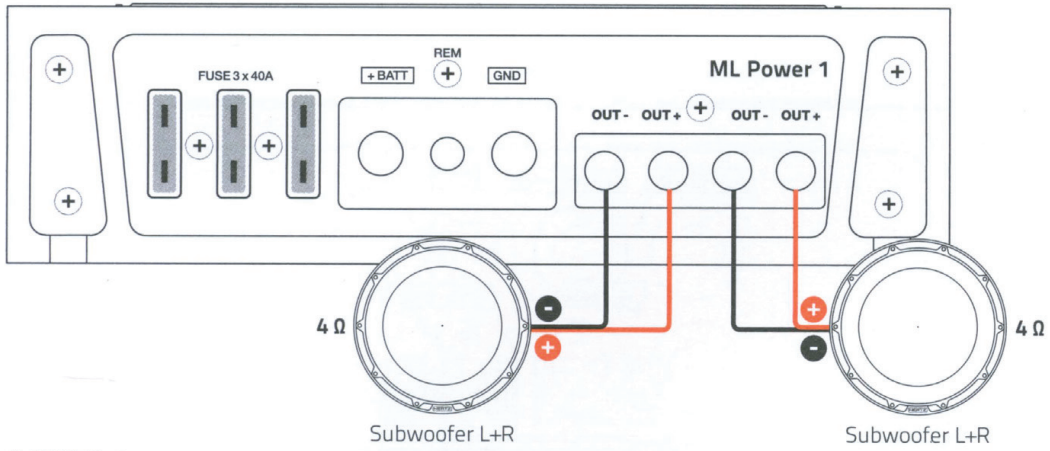


ML POWER 4

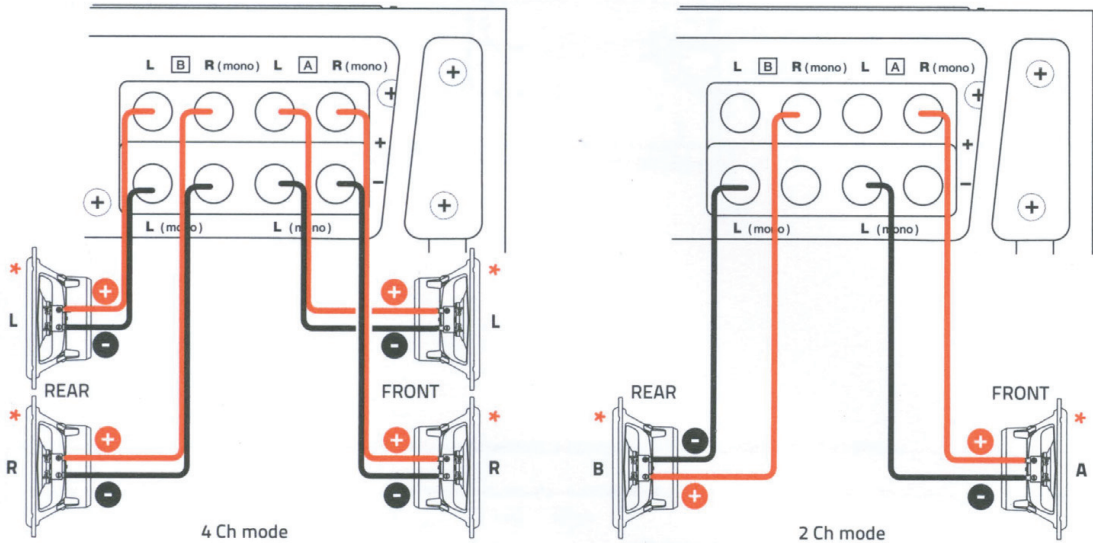


* Coaxial speakers

ML POWER 5

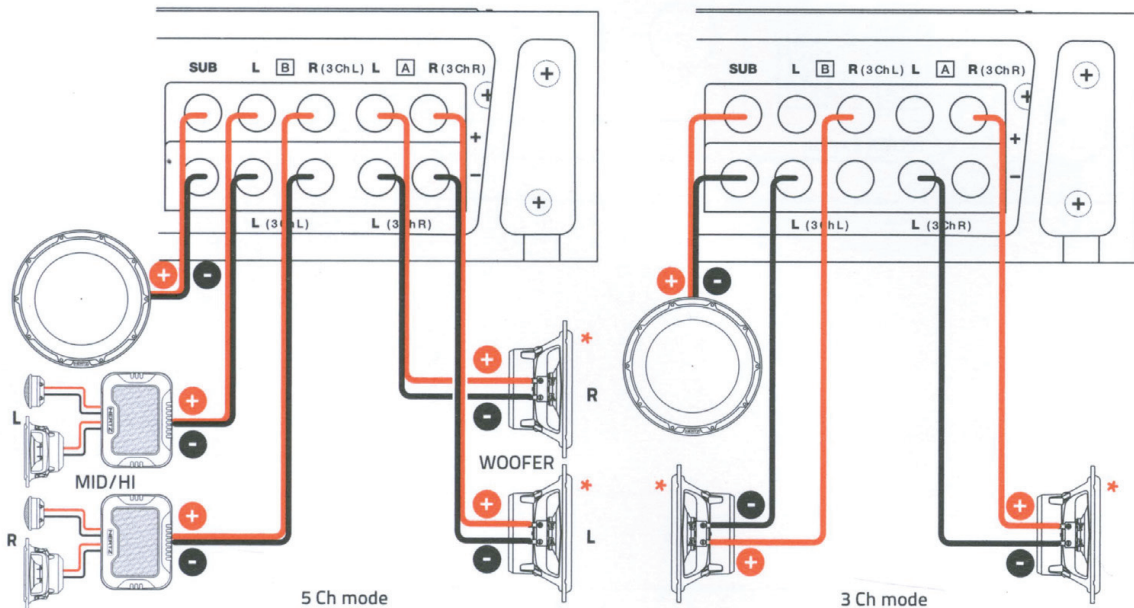

* Coaxial speakers



POWER ML POWER 4

D-CLASS FOUR CHANNEL AMPLIFIER
1000 W



POWER SUPPLY

Power supply voltage:	11÷15 VDC
Idling current:	1,5 A
Idling current when off:	0.04 mA
Consumption @ 2Ω, 14.4 VDC (Max Musical Power):	50 A

AMPLIFIER STAGE

Distorsion - THD (100 Hz @ 4Ω):	0.08 %
Bandwidth (-3 dB):	5 ÷ 55k Hz
S/N Ratio (A weighted @ 1 V):	100 dB
Damping factor (100 Hz @ 4Ω):	80
Pre-In sensitivity:	0.2 ÷ 5 V RMS
Pre-In impedance:	15 kΩ
Speaker-In sensitivity:	0.8 ÷ 20 V RMS
Speaker-In impedance:	470 Ω
Load impedance:	
4 Ch	2Ω
3 Ch	2 x 2Ω ÷ 1 x 4Ω
2 Ch	4Ω

CEA 2006-A RATINGS

RMS Power (4 Ω, ± 1 % THD+N, 14.4 V):	120 W x 4Ch
S/N Ratio (ref. 1 W output):	80 dBA



OUTPUT POWER (RMS) @ 14.4 VDC, THD 1%:

4 Ch	150 W x 4 (4Ω)
4 Ch	250 W x 4 (2Ω)
3 Ch	150 W x 2 (4Ω) + 500 W x 1 (4Ω)
3 Ch	250 W x 2 (2Ω) + 500 W x 1 (4Ω)
2 Ch	500 W x 2 (4Ω)

OTHER FUNCTIONS

Remote In:	4 ÷ 15 VDC - 1 mA
ART™:	Automatic Remote Turn-On/Off with Speaker-In
Fuse:	2 x 40 A

1. ADC (ADVANCED D-CLASS TECHNOLOGY) ensures hi-end acoustic response with unmatched power efficiency;
2. Thermally optimized double extruded heat sink featuring die-cast aluminium ergonomic terminals;
3. 250 W x 4 (2Ω) RMS power boasting hi-end quality;
4. 12 dB/Oct. continuously adjustable (50 to 5k Hz and 80 to 3.3k Hz) active crossover featuring Lo-Pass/Hi-Pass or Full Range settings;
5. Specific A/B Input switch, eliminates the need for RCA Y-Adapters;
6. ML Power IN with balanced Speaker In inputs for an increased noise rejection and RCA In;
7. Operating status real time monitoring through 4 LEDs;
8. Pre-out full range outputs also available with Speaker In inputs;
9. ART™ (Automatic Remote Turn On-Off).

INPUTS / FILTERS

Inputs:	Pre IN / Speaker IN
Outputs:	Pre OUT
A Ch Filters: Full/Hi-Pass/Lo-Pass	50 ÷ 5k Hz (2 range) @ 12 dB/Oct.
B Ch Filters: Full/Hi-Pass/Lo-Pass	80 ÷ 3.3k Hz @ 12 dB/Oct.

FILTER CONFIG.

Speakers Output		Signals Inputs and Selector	
B channels	A channels	B input	A input

SIZE / WEIGHT

Max size (mm/inches):	170 x 289 x 46.70 6.69" x 11.38" x 1.84"
Weight (kg/lb):	2.45 / 5.4

Modello Model Modell Modèle Modelo Модель 型号

N° Serie - Serial Number
Seriennummer
Numéro de série - N° Serie
Серийный номер - 序列号

Data acquisto - Date of
purchase - Kaufdatum Date
de l'achat - Fecha de Compra
Дата покупки - 购买日期

Nome dell'acquirente - Purchaser's name - Name
des Käufers - Nom de l'acheteur Datos del comprador
Имя покупателя - 用户姓名

Indirizzo - Address - Anschrift - Adresse - Domicilio - Адрес - 地址

C.A.P. - Zip Code - Postleitzahl
Code Postal - C.P. - Почтовый
индекс - 邮编

Tel. - Phone - Tel. - Tél.
Telefono - Телефон - 电话

Timbro Rivenditore - Dealer's Mark - Stempel des Händlers
Cachet du revendeur - Sello del Reevendedor
Штамп распространителя - 经销商标志

Firma - Signature - Unterschrift - Signature - Firma - Подпись - 签名

Certificato di garanzia

Warranty certificate

Garantieschein

Certificat de garantie

Certificado de garantia

Гарантийный сертификат

保修卡

WARRANTY

WWW.HERTZAUDIOVIDEO.COM

HERTZ

Declared defect _____

For technical service's use only _____

Repaired on _____

Repaired by _____

Defect _____

Warranty Yes No

Declared defect _____

For technical service's use only _____

Repaired on _____

Repaired by _____

Defect _____

Warranty Yes No

Hertz products are warranted for the period fixed by current laws, under normal functioning conditions, against defects concerning materials or their manufacturing.

Warranty is valid from the date of purchase, certified by receipt.

Warranty is not valid if:

- the product is damaged by incidents, installations and inadequate use or by any causes not depending on materials or manufacturing defects;
- the product is modified or tampered by unauthorised people;
- its serial number is disguised or cancelled.

When the product is under warranty, its manufacturer will decide whether to repair or replace its defective parts. The faulty product must be taken to the retailer where it was purchased, by showing the warranty certificate completely filled in.

In case the product is no longer under warranty, it will be repaired at current costs.

We don't assume liabilities for damages due to transport. We are not responsible for: costs or loss of profits due to impossibility of using the product, other accidental or possible costs, expenses or damages met by the customer.

Warranty according to effective laws.